


# Jebel ESS JBL-HYBT-HV-100/150K

## Hybrid Power System

## User Manual

**JEBEL TECHNOLOGY CO., LTD**
Tel: +971 4 422 56 53
Web: www.nastechsolar.com
Email: office@nastech.ae

**Revised date: 2026-03-25**

# Contents


1 Introduction
- 1.1 Contents
- 1.2 Target readers
- 1.3 Symbols

2 Safety Instructions
- 2.1 Notice for use
- 2.2 Important note

3 Product Description
- 3.1 Transportation
- 3.2 Inspection and storage
- 3.3 Dimension
- 3.4 Packing information

4 Transportation and Storage
- 4.1 Energy storage system
- 4.2 Circuit diagram of JBL-HYBT-HV
- 4.3 The Layout of the main components
- 4.4 Function protection

5 Product Installation
- 5.1 Installation condition and requirements
- 5.2 Tools and spare parts for installation
- 5.3 Mechanical installation
- 5.4 Electrical installation
- 5.5 Communication
- 5.6 ATS wiring
- 5.7 DG dry contact connection
- 5.8 Parallel connection

6 Initial Power On
- 6.1 Inspection
- 6.2 Power supply
- 6.3 Power On steps
- 6.4 Operation completion
- 6.5 Power Off steps

7 Product Operation
- 7.1 LCD display screen introduction
- 7.2 LCD operation
- 7.3 LCD display information schedule
- 7.4 General troubleshooting
- 7.5 Working modes

8 Routine Maintenance
- 8.1 Regular maintenance
- 8.2 Waste disposal

9 Appendix
- 9.1 Specification
- 9.2 Jebel ESS Factory warranty
- 9.3 Maintenance and inspection checklist for running system
- 9.4 Maintenance and inspection checklist forshutdown system
- 9.5 EMS mode RS485 command

# 1 Introduction

## 1.1 Contents

This manual will provide detailed product information and installation instructions for users of the Jebel ESS JBL-HYBT-100-150K-3PHHV hybrid power system inverter of Shenzhen Jebel ESS power Technology Co., Ltd. (hereinafter referred to as Jebel ESS).

Please read this manual carefully before use and kindly store it in a convenient place for installation, operation and maintenance. Jebel ESS will constantly update and revise this manual without inform users by any notice or modification, and it is inevitable that there is a slight discrepancy or error between the manual and the actual product, Please refer to the actual products that you have purchased. Users should contact their local distributors or log in to Jebel ESS Website to obtain the latest version of the manual.

## 1.2 Target readers

Qualification:

- Only professional electricians certified by relevant departments can install this product.
- The operator should be fully familiar with the structure and working principle of the entire energy storage system.
- The operator should be fully familiar with this manual.
- The operator should be fully familiar with the local standards of the project.

## 1.3 Symbols

In order to ensure the personal and property safety during installation, or optimally efficient use of this product, symbols are used highlight the information. The following symbols may be used in this manual, please read carefully, in order to make better use of this manual.

| | |
|---|---|
|  | **DANGER**<br>DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury. |
|  | **CAUTION**<br>CAUTION indicates there is potential risk, if not avoided, could result in equipment malfunction and property damage. |
|  | **Caution,risk of electric shock**<br>When battery bank connecting point are exposed, there will be DC voltage in the equipment DC side; and when output breaker is on, there is a potential risk of electric shock. |
|  | **Caution, risk of fire hazard**<br>Suitable for mounting on concrete or other non-combustible surface only. |
|  | **Protective conductor terminal**<br>The inverter has to be firmly grounded to ensure the safety of personnel. |
|  | Risk of electric shock, Energy storage timed discharge Electrical shock danger exists in the capacitor; the cover shall be moved at least 5 minutes later after all powers are disconnected. |

# 2 Safety Instructions

## 2.1 Notice for use

JBL-HYBT-HV installation and service personnel must be trained and familiar with the general safety requirement when working on electrical equipment. Installer and service personnel should also be familiar with the local laws, regulations and safety requirements.

- Read this manual carefully before operation. JBL-HYBT-HV will not under warranty if any incorrect operate according to this manual.
- Only qualified electrical technician can operation JBL-HYBT-HV.
- When JBL-HYBT-HV is power on do not touch any electrical parts except for the touch-screen.
- All electrical technician must comply with local electrical operation standards.
- Permission from the local utility department is required.

## 2.2 Important note

Following instructions including transportation, mounting, wiring and commissioning in this user manual are required by a proper installation.

The protection level of JBL-HYBT-HV is IP20, which is designed for indoor installation.

Please refer to chapter 5 for installation instruction.

**Item 1: Static electricity can cause damage to JBL-HYBT-HV**

Electrostatic discharge may cause unrecoverable damage to JBL-HYBT-HV internal components!

When operating JBL-HYBT-HV, operator must comply with anti-static protection norms!

**Item 2: Restriction**

JBL-HYBT-HV cannot directly use with life support and medical equipment.

**Item 3: Precautions**

Make sure installation tools or other unnecessary items are not left inside JBL-HYBT-HV before power on.

**Item 4: Maintenance notice**

Maintenance can only be carried out after JBL-HYBT-HV totally power off.



# Transportation and Storage 3

## 3.1 Transportation

Transportation should follow the transportation methods described in the user manual. JBL-HYBT-HV weight and center of gravity should be taken into account during transportation. The center of gravity is marked on the box.

**Caution, risk of danger**

During transportation, lifting equipment and personnel must be qualified. JBL-HYBT-HV should be placed vertically and the inclination cannot be more than 10 degrees. It is not allowed to place JBL-HYBT-HV upside down or transport in a horizontal position.Incorrect lifting and transportation can lead to serious injury, property loss and damage to JBL-HYBT-HV.

## 3.2 Inspection and storage

JBL-HYBT-HV should be carefully checked before signing the document from the transportation company. Check the received items against delivery note, and if there is any defect or damage, immediately notify the transportation company. If necessary, please seek help from Jebel ESS service team.

**Caution**

JBL-HYBT-HV can only be stored when it is stopped and all the doors are closed in a dry room to protect the internal circuits against dust and moisture.

## 3.3 Dimension

| Model | JBL-HYBT-HV-100K-3PH | JBL-HYBT-HV-150K-3PH |
|---|---|---|
| Dimension (W*H*D)mm | 1200/1900/800 | |
| Weight(kg) | 948 | 1230 |

Figure-Demension and weight of JBL-HYBT-HV

## 3.4 Packing information


| NO. | Name | Unit | Qty. | Note |
|---|---|---|---|---|
| 1 | JBL-HYBT-HV | unit | 1 | Key included |
| 2 | User manual | pcs | 1 | |
| 3 | Certificate | pcs | 1 | |
| 4 | Factory test report | pcs | 1 | |

Figure-Packing information


# 4 Product Description

## 4.1 Energy Storage System

JBL-HYBT-HV is designed for energy storage system, it converts DC current generated by battery bank into AC current and feed it into the load/grid, also it can take power from solar or grid to charge battery to ensure uninterrupted power supply to the load.

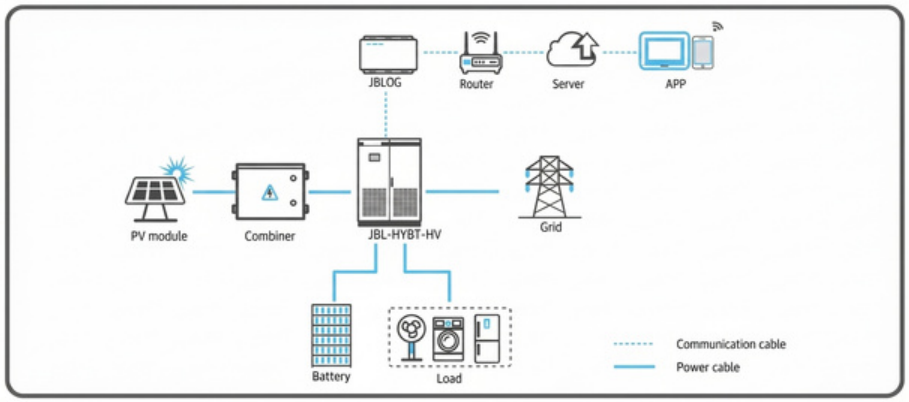



## 4.2 Circuit diagram of JBL-HYBT-HV

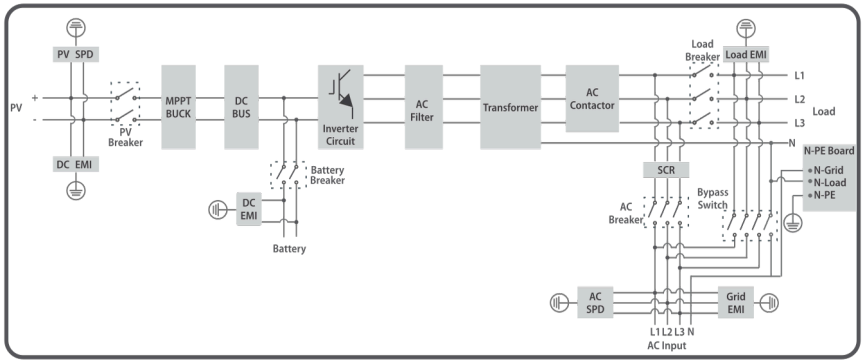


## 4.3 The layout of the main components

### 4.3.1 External components

The main external components of the JBL-HYBT-HV include: LED indicator, LCD touch screen, off-on knob, emergency stop button and other parts.

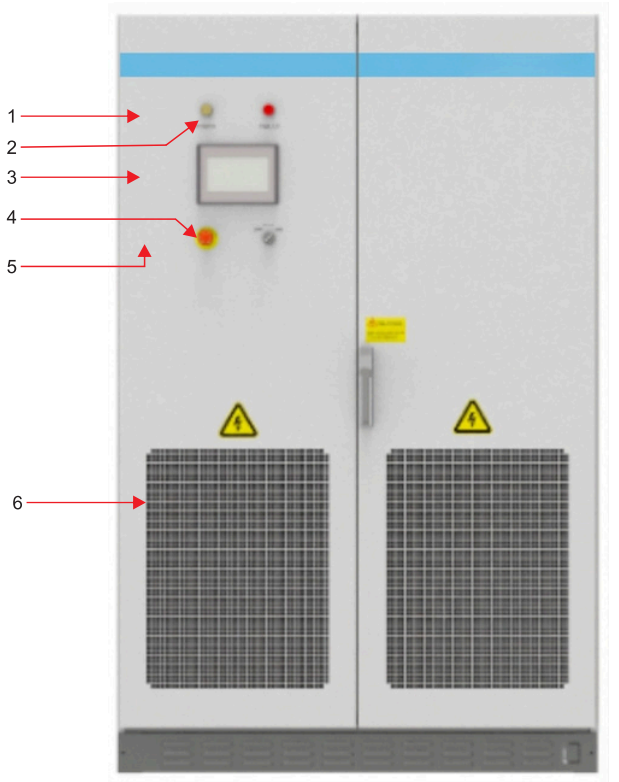


Appearance description of JBL-HYBT-HV

| NO. | Name |
|---|---|
| 1 | Power indicator |
| 2 | FAULT |
| 3 | Touch Screen LCD |
| 4 | OFF/ON knob |
| 5 | EMERGENCY STOP |
| 6 | Dust screen |

Part description

● Indicator

There are two LED indicators on JBL-HYBT-HV which is used to display the current status of JBL-HYBT-HV.




| LED | Description |
|---|---|
| POWER | When JBL-HYBT-HV poweronnormally |
| FAULT | Lights when there is failure in circuit system. |

● **Emergency STOP**

The emergency stop button is only used in case of emergency.




Emergency STOP

The emergency stop button immediately disconnects JBL-HYBT-HV with both grid and battery to ensure the safety. JBL-HYBT-HV will lock in the "Off" position by press this button. Only release the emergency stop button by rotating it clockwise and switch off AC, DC breaker, then JBL-HYBT-HV will resume operation normally.

● **Off-on knob**

It is used to switch on / off JBL-HYBT-HV.




Off-On knob

Please read Section 7 "Product operation" for detailed switch on / off process.


● **Touch screen**

It displays JBL-HYBT-HV operating parameters, power generation, and faulty information record. Please refer to Section 7 for details.

### 4.3.2 Internal component

The internal components of JBL-HYBT-HV include:PV circuit breaker, battery circuit breaker, grid circuit breaker, maintenance switch, load circuit breaker, power supply micro break, AC lightning protection switch, PCB, etc.



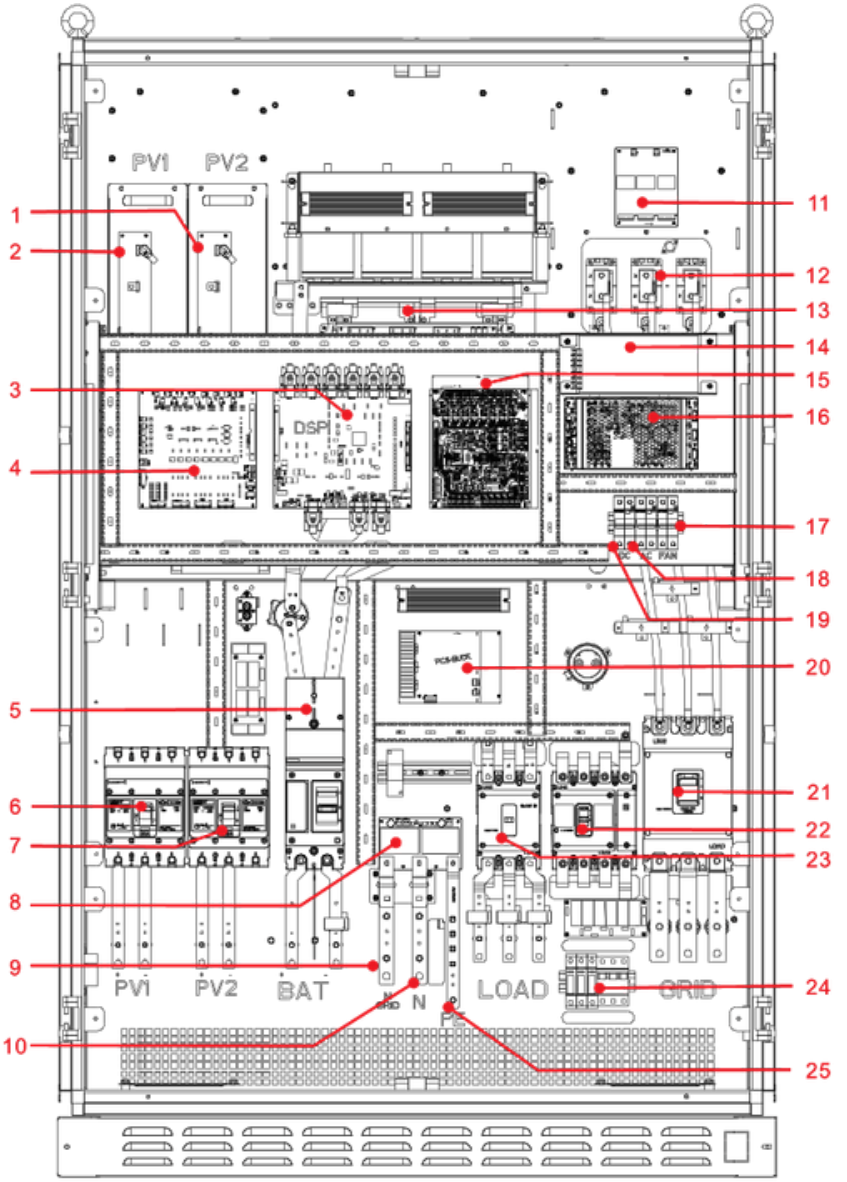


The structural layout of JBL-HYBT-100/150K-3PH is basicallythesame, please pay attention to the printing on machine.

| NO. | Name | Description |
|---|---|---|
| 1 | Pv2 Module | 2rd PV string |
| 2 | Pv1 Module | 1st PV string |
| 3 | Controal board | JBL-HYBT-HV main control board, with communication interface |
| 4 | Sampling board | voltage current temperature sampling PCB |
| 5 | Battery Input | Control the connection between battery and JBL-HYBT-HV |
| 6 | Pv1 Input | Control the connection between PV1 and JBL-HYBT-HV |
| 7 | Pv2 Input | Control the connection between PV2 and JBL-HYBT-HV |
| 8 | NEB Board | NEB Function Switch |
| 9 | Grid Neutral | Grid Neutral Busbar |
| 10 | N terminals | Load N terminals |
| 11 | SCR Driver Board | PCB for driving SCR |
| 12 | SCR | Control on/off grid switch |
| 13 | IGBT | JBL-HYBT-HV side IGBT |
| 14 | 24V power board | 24V power board of the JBL-HYBT-HV |
| 15 | Interface board | JBL-HYBT-HV power supply conversion PCB |
| 16 | 150W Auxiliary Power Module | 150W Auxiliary Power Module |
| 17 | Fan Circuit Breaker | Fan Power Supply Switch |
| 18 | AC Circuit Breaker | AC Auxiliary Power Supply Switch |
| 19 | DC Circuit Breaker | DC Auxiliary Power Supply Switch |
| 20 | BUCK board | DC power supply PCB |
| 21 | AC Input | Control the connection between Grid and JBL-HYBT-HV |
| 22 | BYPASS | Maintenance switch, see 8.1.3 for details<br>The bypass switch for some models is 3P. |
| 23 | AC Output | Control the connection between Load and JBL-HYBT-HV |
| 24 | AC lightning protection switch | Switch for AC lightning protection |
| 25 | Earth terminals | Grounding terminals |

## 4.4 Function protection

**Anti-islanding protection**

When the utility is shut down due to fault or equipment maintenance, JBL-HYBT-HV will physically cut off the connection with grid in order to protect the operators working on the utility grid, JBL-HYBT-HV fully meets the relevant national standards.

**Lightning protection**

The JBL-HYBT-HV has built-in lightning protection module, with DC/AC over-voltage lightning protection, to avoid being struck by lightning.

For more protection functions, please refer to Section 7.3.



# Products Installation 5

## 5.1 Installation condition and requirements

To ensure JBL-HYBT-HV operation properly, the installation environment is required as follows:

> The ingress protection of JBL-HYBT-HV is IP20. Moreover, as this product is an electronic equipment, it shall not be placed in humid environment;

> Install indoors and avoid directly sunlight and rain;

> Excellent indoor ventilation ;

> Clean installation environment ;

> As some noise will be produced in operation, JBL-HYBT-HV shall be installed far from residential quarters;

> The installation ground shall be even enough, and firm enough to support the weight of JBL-HYBT-HV;

> The installation position shall be convenient for maintenance;

> Ambient temperature range: -25℃~55℃;

> Appropriate space shall be reserved for JBL-HYBT-HV to ensure ventilation and cooling.


We suggest JBL-HYBT-HV is installed in the distribution room. The floor, wall clearance, ventilation equipment and precaution should be designed by professional personnel and satisfy the following requirements.

● **Foundation requirement**

JBL-HYBT-HV is required to install on even ground with fire-retardant material as the surface or channel steel support structure, and sag or tilt ground is prohibited. The foundation shall be solid, safe and reliable. The foundation shall be capable of bearing the load of JBL-HYBT-HV. Its load bearing ability shall be concerned throughout the installation place selection.

● **Clearance space**


During installation of JBL-HYBT-HV, appropriate space shall be left to the wall or other equipment, in order to satisfy the requirements on narrowest maintenance channel, emergency exit and ventilation.

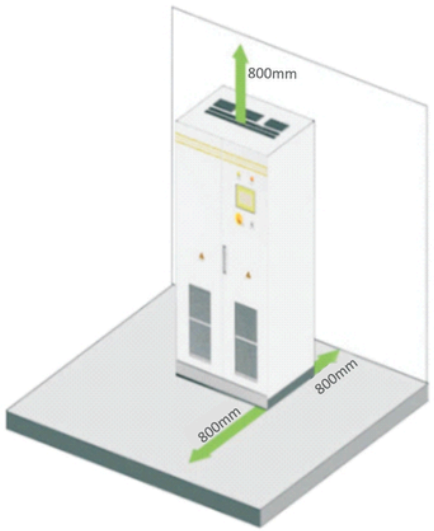


800mm or more space should be left either in the front, on the back and on the top of JBL-HYBT-HV for installation, cooling and maintenance.

● **Cable trench**

The cable connection of JBL-HYBT-HV adopts bottom inlet and bottom outlet. Cable trenches are recommended to ensure easy installation and maintenance.

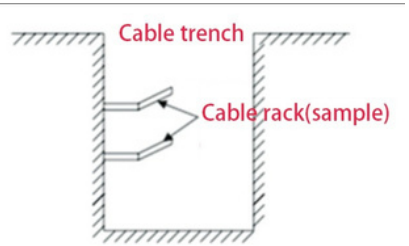


The cable trenches are often designed and constructed by the construction side based on relevant standards, with the equipment weight and dimensions required to be considered. Good electrical connection is needed between different cable trenches and GND terminals.

● **Wiring specification**

Communication cable should stay away from power cable. Both cables shall be kept in 90 degrees, and try to use as short as possible. It is recommended that the insulation impedance of BT + and BT - at DC end to ground to be higher than 1m Ω



The power cable and communication cable shall be placed in different cable trenches respectively to avoid lengthy routing between the power cable and other cables, to reduce the electromagnetic interruption caused by sudden change of the output voltage. The distance among the power cable and communication cable shall be more than 0.2m. When the cables are crossed, the cross angle shall be 90 degrees, while the distance can be reduced appropriately.

● **Ventilation requirement**

JBL-HYBT-HV will produce lots of heat during operation. When ambient temperature is too high, the electrical property of JBL-HYBT-HV may be affected, or even be damaged. Therefore, the heat release shall be fully considered when designing the power distribution room to ensure JBL-HYBT-HV operations in high efficiency.

● **Ventilation environment**

To satisfy the ventilation requirement of JBL-HYBT-HV, considered when installation environment shall meet the following conditions:

JBL-HYBT-HV shall be prevented from being installed in the place of poor ventilation condition and insufficient air flow;

※ The air inlet shall have enough air supplementation.

● **Ventilation equipment**

To ensure safe and reliable operation of the JBL-HYBT-HV, the ambient temperature must be within the permission range -25℃~ 55℃, therefore, appropriate ventilation devices must be equipped with to release the heat generated by the JBL-HYBT-HV.

1. Must inside ventilation equipment inside the distribution room to ensure release of the heat generated by the JBL-HYBT-HV to remain in allow ambient environment temperatures.

2. Additional fan can be added at the air duct outlet to exhaust the air out and ensure balanced pressure;

3. The direction of the air outlet shall be selected according to the local actual wind direction;

4. Pay attention to the dustproof measures and waterproof design at the air inlet and outlet;

5. If more air ducts are required, its dimensions shall be designed by the professionals according to the air output amount.

● **Other protections**

With IP20 of protection level, JBL-HYBT-HV is appropriate to be installed in dry and clean environment. Meanwhile, water leakage of the property shall be prevented, as it may damage JBL-HYBT-HV. According to EMC requirement and noise level, JBL-HYBT-HV shall be installed in industrial environment.

## 5.2 Tools and spare parts for installation

Tools and spare parts required for installation as follows:

- Hoisting crane, forklift or fork lift truck (with the capacity for bearing the weight of JBL-HYBT-HV)
- Torque wrench
- Screwdriver
- Wire stripper
- Terminal crimping machine
- Heat dryer
- Megger and multimeter

## 5.3 Mechanical installation

### 5.3.1 Transportation of packaged whole machine

JBL-HYBT-HV is transported as an integrated unit, it can be hoisted from the bottom with a forklift, or move it with a hoisting crane or crane.

**Note 1:** JBL-HYBT-HV is integrated and cannot be dissembled either in transportation or installation. Any fault attributed to modification unauthorized by Jebel ESS is beyond the warranty.

**Note 2:** In movement, tilt, violent shake or sudden force upon JBL-HYBT-HV shall be prevented, such as sudden down of lifting.

**Note 3:** Please read carefully the labeled parameters to select an appropriate transportation means and storage place.

It is strongly recommend that use forklift to move JBL-HYBT-HV if possible

We suggest to lay the DC input cable and AC main cable before JBL-HYBT-HV move to designated place. As these cables are relatively thick, they are hard to be cabled after JBL-HYBT-HV is installed.

To keep JBL-HYBT-HV in a better protective status, please adopt transportation with package as much as possible, and comply with the labels printed on the package in transportation:

| Sign | Indication |
|---|---|
|  | The gravity centre |
|  | Lifting logo |
|  | Face up to prohibit the inverter horizontally, tilted or upside down |
|  | Handle with care, to avoid the transport environment too intense collision friction damage to the inverter |
|  | Keep away from moisture |

Fully packaged JBL-HYBT-HV can be moved with forklift, hoisting crane or crane.Notice with weight sign painted on the package to ensure all transportation devices with enough load capacity before moving. As the gravity center of the equipment locates at the lower place symmetrical in front and back, left, right, the support point or hoisting point shall be arranged reasonably in transportation.

The forklift transportation is the standard one. The gravity center of the cabinet in transportation should locate between two forks of the forklift. The large size JBL-HYBT-HV may block driver's sight, and it shall be treated with cooperation of the aid personnel.



### 5.3.2 Transportation of unpackaged JBL-HYBT-HV

● **Demolish the package of JBL-HYBT-HV**

Please demolish the packaged JBL-HYBT-HV according to the following procedures:

Procedure 1: Demolish the wood side and roof of the packaged cabinet

Procedure 2: Demolish the out-set package material on the JBL-HYBT-HV

Procedure 3: Demolish the fastening screws between the JBL-HYBT-HV and the pallet

① Demolish the front and back cover lids of the pedestal;


② Screw off the hold-down nuts at the bottom of the wood pallet;

③ Remove the screws, and JBL-HYBT-HV will depart from the wood pallet.

● **Movement and installation of unpackaged JBL-HYBT-HV**

JBL-HYBT-HV with demolished package can be moved with forklift, hoisting crane, slide rail or crane. If the package demolished place is far from the final installation place, it can be transported with forklift containing wood pallet.

After remove the wooden pallet at the bottom of JBL-HYBT-HV when using the forklift, the front and rear cover plates of the base need to be removed first, and the center of gravity should be placed in the middle of the two forklifts, and then start lifting and transporting, as shown in the following figure:

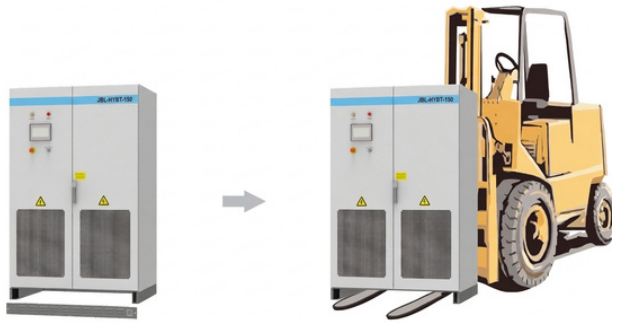

**Caution, risk of danger**

Transporting JBL-HYBT-HV with forklift slowly and gently to avoid violent vibration of JBL-HYBT-HV or collision with other objects.

If lifting method is used for moving, please pay attention to the lifting position, ensure that the lifting angle is 70 °, and be cautious of the center of gravity position of the inverter.

**NOTE:**

- It is necessary to always pay attention to the position of the center of gravity of inverter.
- Take necessary auxiliary measures to ensure the safety of transportation personnel.
- Take necessary auxiliary measures to ensure that the JBL-HYBT-HV is delivered to the final installation site.

## 5.4 Electrical installation

### 5.4.1 Input and output requirements

**Caution, risk of danger**

- There is a danger of high voltage electrical shock during operation JBL-HYBT-HV, only qualified professional electricians are allowed to operation.
- All connections with JBL-HYBT-HV shall be done under non-voltage state.
- JBL-HYBT-HV may be damaged if input or output terminal is incorrectly plugged.
- Failure of acting upon this information may cause serious personnel injury or significant property loss even to death.

**● Battery**

The battery operating voltage is 600V-900V. The battery voltage sould be not lower than 600V and not higher than 900V.

**● PV module**

The MPPT voltage range is 900V - 1300V, which means the maximum MPPT working voltage should not higher than 1300V, and minimum should not lower than 900V.

The maximum PV module open circuit voltage should not higher than 1500V, otherwise it will trigger JBL-HYBT-HV over-voltage protection and shut down.

**● PV and battery configuration**

In order to fully charge battery by PV power, the MPPT voltage must be higher than the maximum battery voltage. The appropriate and recommend configuration is the MPPT voltage should be 50-200V higher than the maximum battery voltage, otherwise a large difference will cause JBL-HYBT-HV accelerate the wearing and reduce efficiency.

**● Three phase grid connection**

The three phase utility connection and JBL-HYBT-HV installation should follow local utility connection requirements regulations and approved by local relative department. JBL-HYBT-HV will constantly detects whether the utility meets connection conditions and its protection parameters can be set.

| Model | 100/150 |
|---|---|
| Grid voltage range | 360V-440V |
| Grid frequency range | 45Hz-55Hz/55Hz-65Hz |

**● Cable requirements**

1. Please select the corresponding withstand voltage cable according to the voltage level.

2. Because different voltage will lead to change of current, please calculate the corresponding cable diameter according to the actual voltage range. The following table only provides the cable requirements of the lowest working voltage and rated power. It better to calculate it according to the site voltage in actual application, because different voltage will lead to current change. please inquire the Jebel ESS service team if you need more details.



| Cable | Cable Diameter Requirements (mm²) | | Aperture |
|---|---|---|---|
| Model | JBL-HYBT-HV-100K-3PH | JBL-HYBT-HV-150K-3PH | JBL-HYBT-HV-100/150K-3PH |
| | Bellow are total line diameter | | |
| PV | 50mm² | 50mm² | Φ10 |
| Battery | 95mm² | 120mm² | Φ10 |
| Utility | 95mm² | 120mm² | Φ10 |
| Load | 70mm² | 95mm² | Φ10 |
| N wire | 120mm² | 120mm² | Φ10 |
| Earth wire | More than 16 mm².Green and Yellow cable is recommended | | Φ8 |
| Communication Wire | 0.75mm², shielded communication line is recommended | | / |

### 5.4.2 DC cables connection

**Caution, risk of danger**

The positive and negative of the battery shall not be connected in reverse. A multimeter shall be used to determine the polarity before connect into the corresponding input ends of the battery.

Specific procedures are as follows:

1) Disconnect the distribution circuit breaker at the DC side, and ensure that no voltage on the wire at DC side.

2) Use a multimeter to measure the open circuit voltage of the battery to ensure that it is in the allowed range.

3) Determine the positive and negative pole of the battery with a multimeter.

4) Strip off the insulation skin at the end of the cable.

5) Crimp the wiring copper nose.

1. Put the stripped copper core into the crimping hole of the copper nose.

2. Use the terminal pressing machine to press the copper nose tightly. The number of crimping shall be more than two.

6) Install the shrink fit sleeve.

1. Select the heat shrinkable sleeve which is more consistent with the cable size, length is about 5cm.

2. The heat shrinkable sleeve shall be sleeved on the copper nose of the wiring to completely cover the wire pressing hole of the copper nose.

3. Use a heat blower to tighten the heat shrink sleeve.

7) Connect the positive of the battery to the "Battery-input +" of DC input

1. Select the bolts that match the copper nose.

2. Connect the copper nose at both ends of the wiring firmly to the "battery input +" end of JBL-HYBT-HV and the positive pole of the battery.

3. Tighten the bolts with a screwdriver or wrench.

8) Connect the "battery input -" end of JBL-HYBT-HV to the negative pole of the battery by cable according to the method of step 7.

9) Cable the "PV input +" end of JBL-HYBT-HV to the positive pole of the PV module according to step 7.

10) Cable the "PV input -" end of JBL-HYBT-HV to the negative pole of the PV module according to step 7.

11) Please be sure that all wirings are fastened.

### 5.4.3 AC cables connection

**Caution, risk of danger**

When connecting the utility, disconnect AC circuit breakers and ensure there are non-voltage on AC cables.

The AC output voltage of JBL-HYBT-HV is 400V, which is connected to the utility through an isolation transformer. The wiring method of AC side and grid side is as follows:

1) Disconnect all AC circuit breakers and ensure there are non-voltage on AC cables with a multimeter.

2) Ensure the wiring phase sequence at AC side is in consistent with the at grid side.

3) Strip the insulation skin off at the end of the cable

4) Crimping copper nose

1. Put the exposed copper core of the stripped wire head into the crimping hole of the copper nose.

2. Use the terminal crimper to compress the copper nose of the wiring, and the number of crimping shall be more than two.

5) Install the shrink fit sleeve.

1. Select the heat shrinkable sleeve which is more consistent with the cable size, length is about 5cm.

2. The heat shrinkable sleeve shall be sleeved on the copper nose of the wiring to completely cover the wire pressing hole of the copper nose.

3. Use a heat blower to tighten the heat shrink sleeve.

6) Connect "L1" cable to "L1" of AC distribution cabinet, i.e. phase a (U). Select the bolts that match the copper nose.

7) Connect "L2" of AC output to "L2" of AC distribution cabinet, i.e. phase B (V); connect "L3" of AC output to "L3" of AC distribution cabinet, i.e. phase C (W); connect n-line to n wire on the inverter.

JBL-HYBT-HV must be earthing well for safety; Please make sure of the connection between PE in power distribution cabinet and PE copper in the JBL-HYBT-HV; and the earthing cable more than half of load cable, and earthing resistance is not higher than 0.1Ω.


After all the wiring completely through under the bottom of JBL-HYBT-HV, the connection port must be sealed with dust cotton, to prevent dust from entering the inside of JBL-HYBT-HV.

Connect several connecting wires on the PE copper bar as some parts inside the JBL-HYBT-HV need to be grounded, please do not change them without permission, so as to avoid electric shock



## 5.5 Communication

The JBL-HYBT-HV adopts various communication modes. The figure below is the diagram of the communication port of the control board.

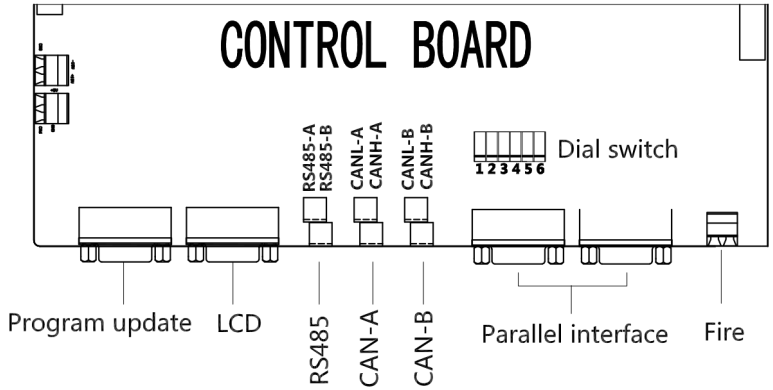


Description of dial switch:

The dial switch is a connection control switch with communication matching resistance (120 Ω). "On" indicates connection resistance and "off" indicates no connection with the resistance.

| NO. | Name | Description |
|---|---|---|
| 1 | 485 | 485 matching resistance |
| 2 | CANA | CAN matching resistance |
| 3 | CANB | CAN matching resistance |
| 4 | M-S | Parallel matching resistance |
| 5 | ON-OFF | |
| 6 | MMS | |

1. RS485 communication

- Each JBL-HYBT-HV communication with others through RS485 line, communicate with other through RS485 line, and finally transmitted to the monitoring server through the JBLOG via Ethernet, which can remotely moniter the operation status and data of single / multiple JBL-HYBT HV(s) in real time. Both ends of the RS485 communication line are connected with terminals, and the terminals at both ends are connected in parallel. The length of the line shall not exceed 1000m. It is recommended to use a special shielded communication line.
- The RS485 interface of JBL-HYBT-HV is located on the internal control board of the machine. Please distinguish "A" and "B". The wrong connection will lead to communication failure.
- If Shinemaster / JBLOG is not used for monitoring, the user's own monitoring equipment needs to be compatible with the RS485 communication Jebel ESS RS485 Modbus protocol.
- For the same 485 bus, only 120Ω matching resistance needs to be connected from end to end. Please set the dial switch according to the field installation.




2. BMS-CAN communication

● When the JBL-HYBT-HVworks with battery with BMS, it needs to communicate with BMS through CAN communication. The CAN communication interface of BMS is connected to CAN-A interface of the JBL-HYBT-HV,communication can be realized after docking the communication protocol.

● Terminals are used at both ends of the CAN communication line. The terminals at both ends are connected in parallel to make the can communication line. It is recommended to use a special shielded communication line to reduce communication interference and improve the operation stability of the system.

● The CAN-A interface is on the internal control board of JBL-HYBT-HV. Please distinguish between "L" and "H". Incorrect connection will lead to communication failure.

● If the user does not use the BMS battery system produced by Jebel ESS, the user's own BMS battery system needs to be compatible with the BMS communication protocol of Jebel ESS.

● For the same CAN bus, just connect 120Ω matching resistance from end to end. Please set the dial switch according to the field installation.

3. ATS- CAN communication

● When the inverter is used with ATS, They need to communicate with each other, and the CAN communication interface of the ATS is connected to the JBL-HYBT-HV CAN- Binterface. Note: only the ATS produced by Jebel ESS can communicate with the JBL-HYBT-HV.

● The ATS produced by Jebel ESS is equipped with a special communication line for communication with the JBL-HYBT-HV.

● The CAN-B interface of the JBL-HYBT-HV is on the internal control board of the inverter. Please distinguish between "L" and "H".

● When the inverter is used with the bypass cabinet, it needs to communicate with the bypass cabinet, and the CAN communication interface of the bypass cabinet is connected to the inverter's CAN- B interface. Note: only the bypass cabinet produced by Jebel ESS can communicate with the JBL-HYBT-HV.

● The bypass cabinet produced by Jebel ESS is equipped with a special communication line for communication with the inverter, which can be directly connected to the CAN-B interface of the inverter.

● The CAN-A interface of the inverter is located on the internal control board of the inverter. Please distinguish between "L" and "H". Incorrect connection will lead to communication failure.

● For the same CAN bus, just connect 120Ω matching resistance from end to end. Please set the dial switch according to the field installation.



3. Parallel communication (special for customized parallel function)

● Parallel communication is required when two same models of JBL-HYBT-HV are used in parallel.

● DB9 communication line is used for parallel communication, which goes with the shipment in parallel scheme, also there will be special parallel communication interface.

● When paralleling two JBL-HYBT-HV models, DB9 communication line is used to connect the parallel interfaces of two models. Select either one reserved parallel interfaces on the control board can be selected as the reserved interface.


As Parallel function is a special customized function, please active it under the guidance of Jebel ESS staff.

## 5.6 ATS wiring


1.When the system needs to be connected to utility grid and gemerator at the same time, ATS as an accessory of JBL-HYBT-HV is used together with JBL-HYBT-HV to switch between utility and generator.

2.The main wirings between ATS and JBL-HYBT-HV are ATS internal panel power line, CAN communication line and AC power line.

Wiring diagram is shown as below:

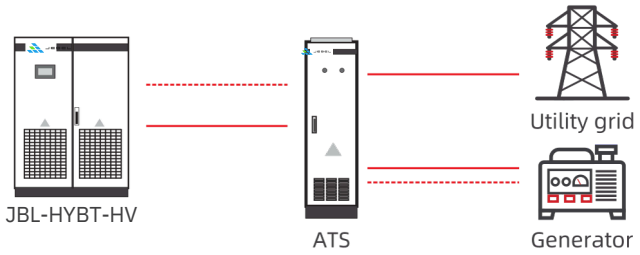


3. There are three circuit breakers in ATS. The middle circuit breaker is connected to the grid switch (AC input) of JBL-HYBT-HV. The other two are grid switch (grid) and generator (Gen) switch. Follow the sign on cabinet. JBL-HYBT-HV cannot operate properly, if either any connection incorrectly, or three phase sequence.

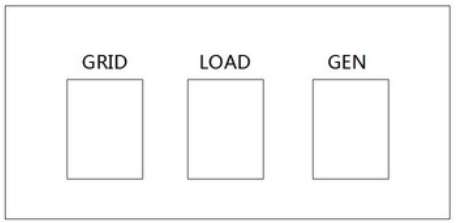



4. ATS communications with JBL-HYBT by connection on CAN-B of JBL-HYBT. Pay attention to the sequence and distinguish "L" and "H".

5. The ATS has two types of power sourcing methods:

a. Sourced from the battery port

b. Sourced from the CN3 port of the BUCK board of JBL-HYBT.


Refer to the wire labels of the ATS power supply cable for actual power supply source. Pay attention to positive and negative, red is positive and black is negative.

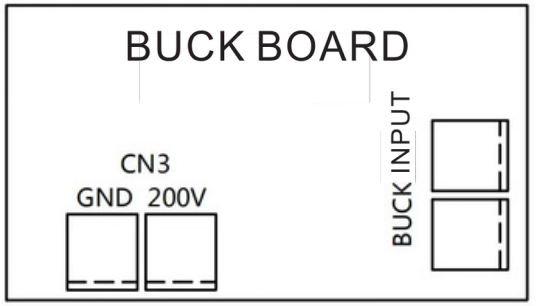


When the ATS of other manufacturers are applied CAN communication mode cannot be used to distinguish the generator and utility. They can be distinguished by connecting passive dry contact signal (it is suggested that the switchover time for ATS to switch between generator and grid should be more than 5 seconds to ensure the correct mode switching of the inverter). Connect the signal line to the CN14 port of the energy storage inverter's interface board. It's default that switch on signal means connecting the utility, and switch off signal means connecting to generator.

## 5.7 Diesel generator dry contact wiring

The JBL-HYBT-HV has a passive dry contact contactor to control the diesel generator, and the following is the dry contact structure diagram (initial state).

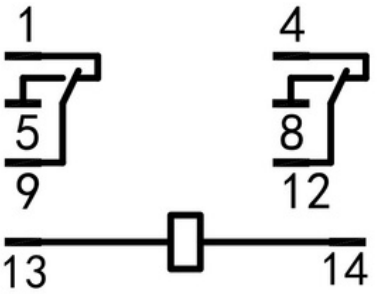

Wiring instructions:

1. "13" and "14" are the power supply of dry contact contactor, no wiring required.

2. There are two groups of connection contacts in the dry contact, "1", "5" and "9" are a group, "4", "8" and "12" are a group, and the two groups will act at the same time.

3. The initial state is that when the inverter does not send the command to start the diesel generator, the state between "1" and "9" means stay closed, and the state between "5" and "9" means stay opened. When the inverter sends the command to start the diesel generator, "1" and "9" are switched to stay opened from stayed closed, and "5" and "9" are switched to stay opened from stayed closed. "4", "8" and "12" are the same.

4. When the current needs to pass through the dry contact, the AC voltage shall not exceed 240V, the DC voltage shall not exceed 28V, and the current shall not exceed 5A.

## 5.8 Parallel connection

● **Parallel operation system:**

1. Multiple same model JBL-HYBT-HV will run same working mode and supply load simultaneously during parallelling.

2. Parallel operation means in off-grid mode, multiple JBL-HYBT-HV maintain the same AC frequency, amplitude and phase.


● **System requirements:**


1. It must be the same JBL-HYBT-HV model.

2. The program has to be customized parallel program, default single model running programs is not applicable in parallel.

3. The maximum parallel is 4 units during any Off-Grid scenario.

● **System wiring diagram shown as follow:**

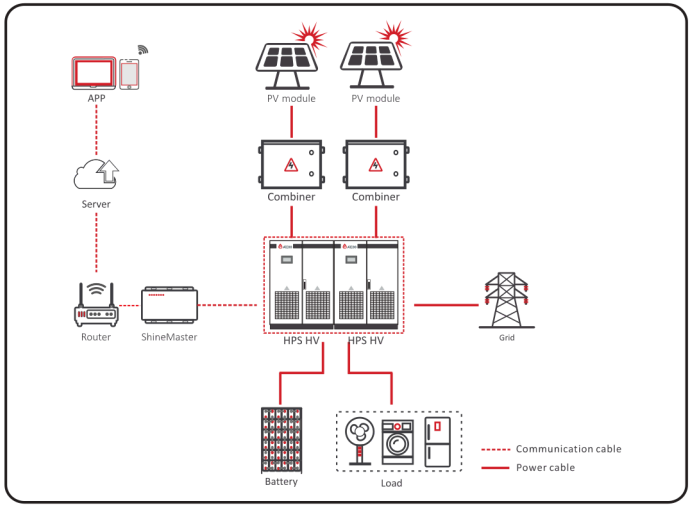

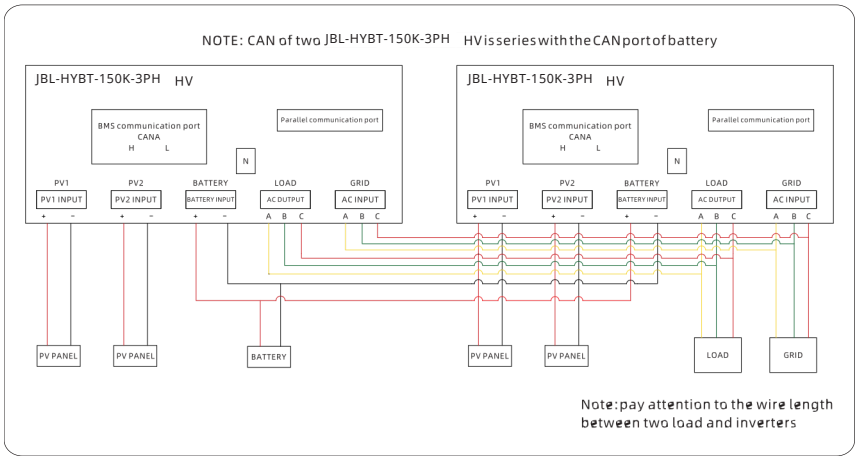
● **Wiring instructions:**

1. Configuration PV for each JBL-HYBT-HV as same as possible.

2. It is recommended to share the battery in order to reduce the circulation loss.

3. Each JBL-HYBT-HV needs to communicate with BMS when works with lithium battery.

4. When multiple JBL-HYBT-HV parallel, connect all of load terminals before connect to load. The cable length from load terminals to combine point must be the same.

5. In order to ensure the communication quality, please install the paralleled JBL-HYBT-HV at the same location to reduce the communication distance. length of communication cable is 10 meters, the parallel distance should be within 3 meters.

● **Working mode:**

The working mode of parallel system is the same as single system, but the working mode of each JBL-HYBT-HV should be set to the same.

Redundant function selection Description: Redundancy can only be selected when one JBL-HYBT-HV fails and others still enough to supply all loads; otherwise, it will cause overload fault.

**Note:** parallel operation is a special function. Standard JBL-HYBT-HV may not be equipped with this function. If you need this function, please contact Jebel ESS in advance.

Please contact the Jebel ESS service team to assist in installation to ensure the correct operation of the parallel system.

# 6 Initial Power On

## 6.1 Inspection

There should be an installation inspection before JBL-HYBT-HV operation. At least two personnel do the inspection according to the items listed below to ensure the correctness of the installation.

**Inspection items for installation**

- There is no deformation or damage to the JBL-HYBT-HV.
- Bottom of the JBL-HYBT-HV is fixed securely, the foundation support is stable and reliable.
- There is enough space around the JBL-HYBT-HV.
- The temperature, humidity and ventilation conditions of the environment where the JBL-HYBT-HV is located meet the requirements.
- There is enough cooling air for ventilation.
- Cabinet sealing protection is complete and reliable.

**Electrical inspection**

- JBL-HYBT-HV is grounded completely and firmly.
- The grid voltage matches the rated output voltage of the JBL-HYBT-HV.
- The phase sequence of grid connection is correct, and the tightening torque meets the requirements.
- The positive and negative poles of DC input connection are correct, and the tightening torque meets the requirements.
- Communication wiring shall be correct and keep a certain distance from other cables.
- Cable number is marked correctly and clearly.
- The insulation protection cover is complete and reliable, and the danger warning label is clear and firm.

**Other inspection**

- All useless conductive parts shall be tied with insulating ties.
- There are no tools, parts, conductive dust or other foreign matters left inside the cabinet.
- There is no condensation of moisture or ice in the cabinet.



## 6.2 Power supply

- **Battery power supply**

The battery can be used for initial power on. When the battery breaker is connected, the LCD should be on.

## 6.3 Power On steps

JBL-HYBT-HV is ready to operation after proper installation and inspected system settings.

**First run**

The first operation steps are as follows:

1. Connect the PV, battery, AC input and power supply micro breaks, and do not connect the AC output switch before system operates normally to avoid any impact on the load;
2. Bypass switch shall be disconnected when JBL-HYBT-HV operation normally;
3. Check whether the screen sampling data is abnormal and consistent with the actual situation;
4. Check whether the battery parameter setting is consistent with the actual battery, if not please modify.
5. If the battery has BMS, check whether the BMS is enabled and normal.
6. If the grid input end is connected to generator, check whether generator is enabled.
7. If it is equipped with ATS manufactured by Jebel ESS, check whether the bypass cabinet is enabled.
8. Check the history information page of the screen, and check whether there are serious faults according to the general faults in Chapter 8.3.
9. After checking, turn the knob to "on", click "on" on the LCD" on / off "page, and wait for the machine to enter" grid connection "; if the site is off grid, it will enter" off grid mode "after starting;
10. During operation, observe whether the data displayed on the screen is normal and whether there is fault information reported, and whether the machine has abnormal noise and smell; if any abnormal situation occurs, please stop the machine immediately for inspection.



**Warning!**

The bypass switch is only used for maintenance. Please do not turn it on during normal operation.

Manual shutdown

1. After clicking the LCD shutdown button to shut down the machine manually, it must be turned on manually through the start button (on) on the LCD; if the machine is turned off by turning the knob to "off", turn the JBL-HYBT-HV knob to "on" first, and then click the "on" button on the LCD "switch on" page to start the machine, otherwise inverter cannot start automatically.
2. The inverter is still electrified after manual shutdown.

## 6.4 Operation completion

The following procedures shall be carried out after the inverter is normally in operation.

Procedure 1: Inspect whether abnormity exists in the inverter, such as excessive noise, excessive heat, abnormal smell or smoke.

Procedure 2: Measure whether inverter voltage, current and THD are stable.

Procedure 3: Operate LCD control panel and inspect whether it displays normally and accurately.

Procedure 4: Test whether it conforms to the preset operation logic.

By now, the pilot operation of inverter is fully completed, and we can enter the daily operational maintenance.

## 6.5 Power Off steps

**CAUTION!**

After the inverter is completely powered off, the general DC switch at battery side and the Grid switch at grid side still maintain voltage. If operations are needed, please be sure to cut off the outer power completely, and wait for not less than 5 minutes.

1. Click the OFF button on LCD or turn the off-on knob from ON to OFF;
2. Cut off DC SWITCH PV input and Battery input;
3. Cut off AC SWITCH AC input and AC output;

**CAUTION!**


It is normal for the inverter to give alarm during power off. The power down steps can be continued.





## 7.1 LCD display screen introduction

User can view the information of the JBL-HYBT-HV operation on the LCD touch screen, as well as setting the operating parameters. In order to facilitate the operation, a menu is provided below.

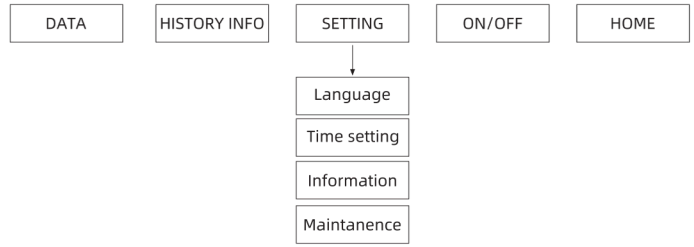


JBL-HYBT-HV LCD Menu logical structure


1. After the LCD is powered on, it enters the startup interface and home page for after 15s, but it still takes about 2 minutes to initialize. JBL-HYBT-HV cannot be started until the initialization is completed.
2. At the top right of each page, The communication status between LCD and JBL-HYBT-HV control board (if √, the communication is normal, otherwise ×, communication failure), station number of the communication end where JBL-HYBT-HV is located, system time, etc are displayed.
3. After power on and entering the home page, the program needs to be initialized for a period of time. When √ and numbers appear, the initialization is completed.

## 7.2 LCD operation

### 7.2.1 Home page

When powered or clicking "Home" button in any interface will enter into the Home page.

The operating status of the inverter output power, safety standard, model, input and output voltage,current information can be viewed in the page. Pressing the following key can switch to other pages.

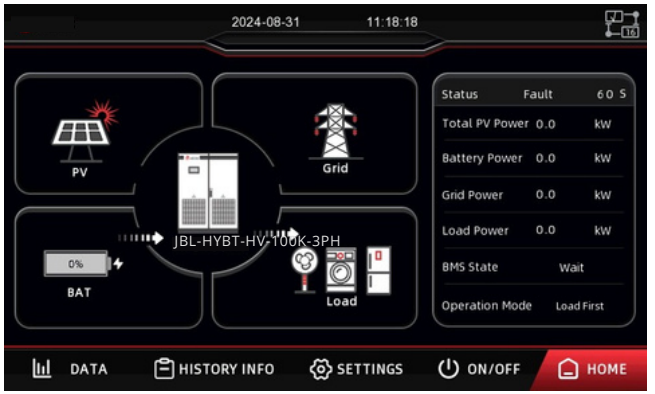

| Operation status | Description |
|---|---|
| Fault | Not started or failed to start |
| Wait | Start initialization |
| Check | System self checking |
| Permanent fault | Serious failure occurred |
| Off grid mode | Off grid mode with load |
| On grid mode | Successfully connected to grid |
| PV charge | PV only charging mode |
| Parallel to off-grid | Parallel system waiting to enter off-grid mode |
| Parallel to on-grid | Parallel system waiting to enter on-grid mode |

Communication station number: the number represents the current station number, which is 485 communication station number. The "√ " above the number indicates that the LCD and the control board communicate normally, and when the display is "×", it indicates that the communication is lost.

On-Grid mode: when the operation state of JBL-HYBT-HV is on-grid, the current On-Grid mode will be displayed: load priority, battery priority, economic mode, EMS mode and diesel generator mode.

BMS status: when it works with lithium battery with BMS, the current BMS status is displayed here. "Wait" is displayed when there is no BMS communication.

### 7.2.2 ON/OFF interface


Clicking "ON/OFF" button in any interface will enter into this interface.

There are "ON" and "OFF" button which is used to turn on and turn off JBL-HYBT-HV.


Turn on: turn the start knob to on and click "on" to start up successfully.

Turn off: shut down by clicking "off", or turn the start / stop knob to off directly.


If JBL-HYBT-HV will be turned off for a long time, use the off-on knob to shut it down.

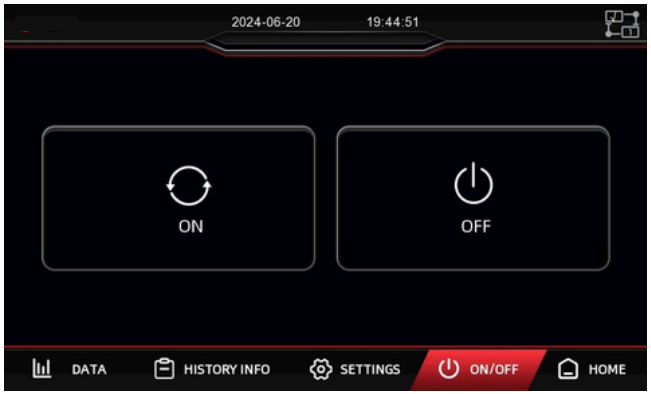


**Operation data:** display the current parameters and real-time data of energy storage power generation, including grid voltage, grid frequency, grid current, DC input voltage, DC input current, temperature in the case and total generation time (real-time update).

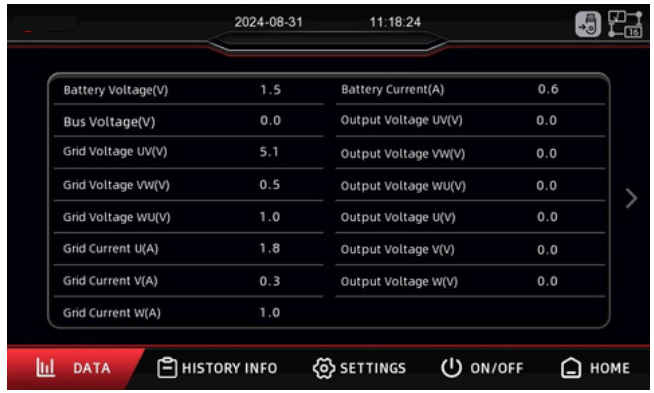


**Product Information:** This page shows the manufacturer, JBL-HYBT-HV serial number, hardware and software version information, and the date of manufacturing.

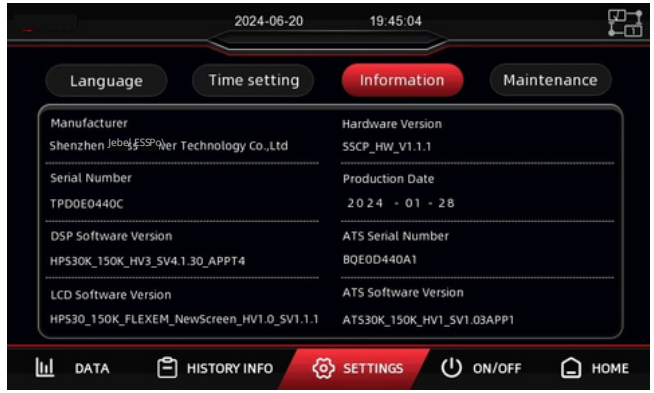


**Maintenance:** the interface requires a password to login. It is for electrician and maintenance personnel who are fully familiar with the structure and working principle of the DC grid system only, in order to avoid damage to personal safety and the JBL-HYBT-HV.

Enter the correct password to enter the submenu of "equipment maintenance". The submenu includes: protection parameters, calibration parameters, power grid management, factory settings. The default one is"protection parameters".

Parameter modification method: modify the set value. Click Save to change the current value to the same value as the set value. There are several reasons why the current value cannot be changed to the set value:

- LCD response is slow, you can switch pages to speed up the update.
- The value exceeds the limit and cannot be saved.

### 7.2.3 System setting


Clicking "Setting" button in any interface will enter into this interface.

Submenu: language , time settings, information, maintenance. Pressing the left button can enter into the corresponding submenu interface. The default one is language setting interface.

**Language Settings:** Select language, currently it only supports Chinese, English, French.





**Time setting:** system time setting (if the date and time displayed on LCD is not inconsistent with the actual date and time, they can be modified here).

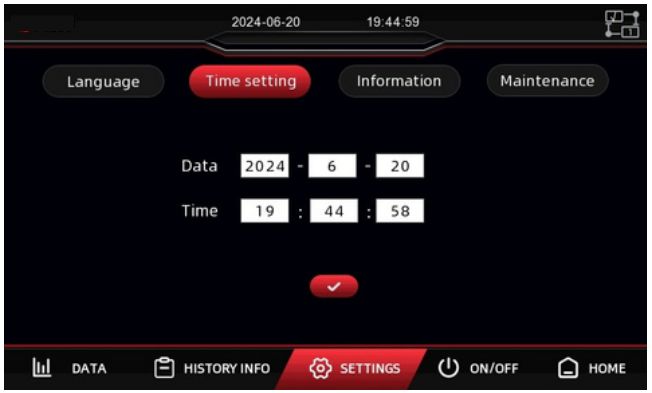




1. Maintenance:

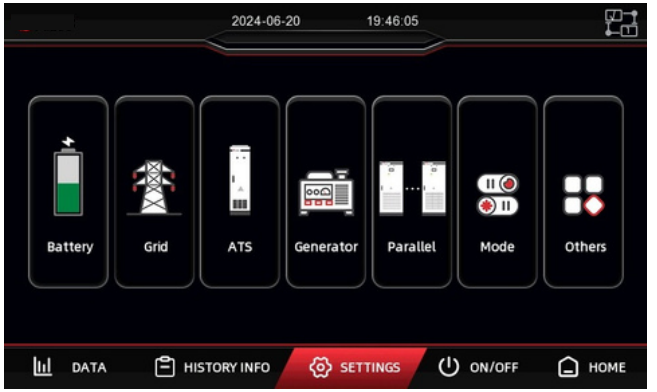


**Battery:** battery's setting and parameter

**Grid:** grid's setting and parameter

**ATS:** ATS's setting


**Generator:** GEN's setting and parameter

**Parallel:** JBL-HYBT-HVparallel's setting

**Mode:** working modes

**Others:** Other setting and parameter

## Battery

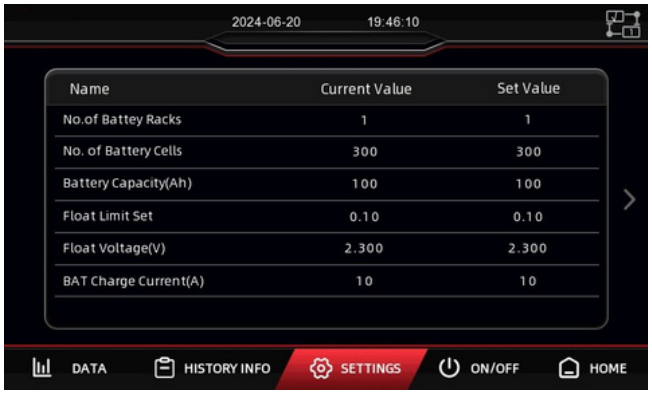


This page is the battery parameter setting page. As battery is an important part of the energy storage system, the battery parameters need to be carefully confirmed whether they are consistent with the actual situation.

**No. of Battery Racks**: Number of Battery Racks

**No. of Battery Cells**: Number of Battery Cells

**Battery Capacity(Ah)**: Battery Capacity

**Float Limit Set**: When the battery with BMS, the charging current setting value will be based on the smaller one of the maximum charging current limit value sent by the BMS and the charging current setting value set on the screen. The battery real-time cell voltage will be calculated based on the maximum cell voltage sent by the BMS. When the battery without BMS, it will be floating limit in the DG mode and sends a signal to shut-off DG.


$$\text{Target charging current} = \frac{\text{floating cell voltage - current unit voltage}}{\text{floating charge current limiting point value}} \times \text{battery charging current set value}$$

**Float Voltage(V)**: The voltage value of the float charging of the battery cell. When the voltage of the battery cell reaches this set value, the charging current approaches 0A.

When with BMS, calculate the maximum cell voltage sent by the BMS, otherwise calculate the average voltage.

**BAT Charge Current(A)**: This value modify the charging current of the battery. Please set it according to the actual parameters of the battery to avoid significant losses caused by overcharging. When the battery with BMS, the BMS will send a maximum charging current limit and compare it with the charging current set on the screen, taking the smaller value for charging.



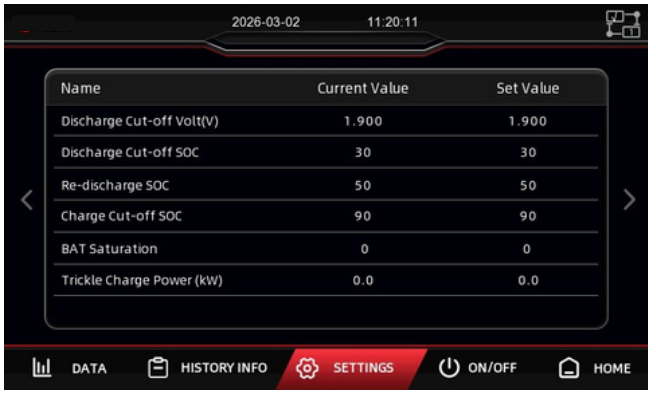


**Discharge Cut-off Volt(V)**: When the voltage of the battery cell reaches the discharge cut-off voltage, the battery stops discharging (Switch-on DG in Off-Grid mode or continue discharging until the undervolt activity then switches to PV-only mode).

**Discharge Cut-off SOC**: When the battery with BMS and the SOC reaches the set value, JBL-HYBT-HV will stop discharging. This only works in On-Grid mode; It does not works when the battery without BMS, and the discharge cut-off voltage is used for judgment.


**Re-discharge SOC**: When the battery with BMS, after triggers the discharge cut-off SOC and stops discharging. Only continue discharge when the SOC returns to the set value, and only works in On-Grid mode; It does not works when the battery without BMS, and BAT saturation is used as a judgment.

**Charge Cut-off SOC**: When the battery with BMS, the SOC reaches the set value and stops charging. It does not works when the battery without BMS; When this setting value activity simultaneously with the float charging voltage, whichever is reached first takes effect.

**BAT Saturation**: Only works in On-Grid mode, when the battery stops discharging and switches to charging due to undervoltage or discharge cut-off, the discharge can only be restored when the battery unit voltage reaches the set value.

$$\text{Recovery discharge unit voltage=floating charge unit voltage} - \frac{\text{battery saturation set value}}{10}$$

**Trickle charge Power(kW)**: When reaching the discharge cut-off voltage or discharge cut-off SOC, charge battery with this power to prevent the battery voltage from being too low.

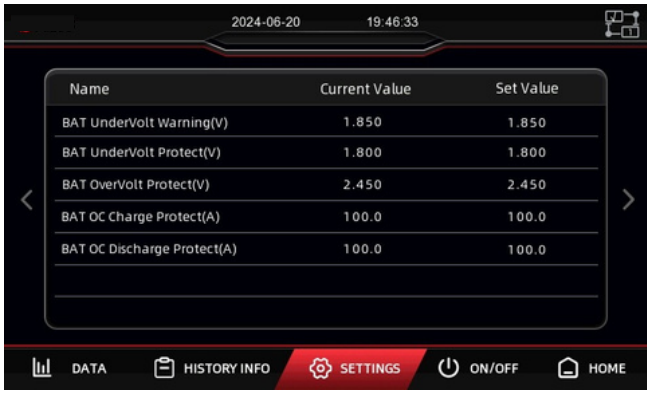



**BAT UnderVolt Warning(V):** The cell voltage value during battery undervoltage fault. When battery with BMS, use the minimum cell voltage sent by the BMS to calculate, otherwise calculate based on the average voltage.

**BAT UnderVolt Protect(V):** The cell voltage value during battery undervoltage protection. When the battery voltage reaches this set value, JBL-HYBT-HV will shut down for protection. When battery with BMS, use the minimum cell voltage sent by the BMS to calculate, otherwise calculate based on the average voltage.

**BAT OverVolt Protect(V):** The cell voltage value during battery overvoltage protection. When the battery voltage reaches this set value, JBL-HYBT-HV will shut down for protection. When battery with BMS, use the maximum cell voltage sent by the BMS to calculate, otherwise calculate based on the average voltage

**BAT OC Charge Protect(A):** The protection value of total battery charging current.

**BAT OC Discharge Protect(A):** The protection value of total battery discharging current.

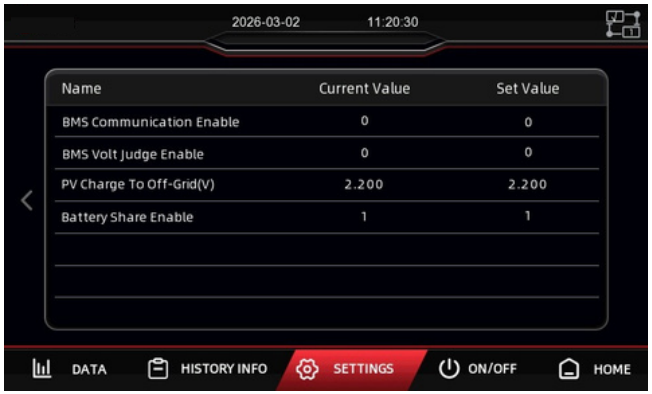


**BMS Communication Enable:** Set 1 for JBL-HYBT-HV communications with Battery, otherwise set 0.


**BMS Volt Judge Enable:** When the poor SOC calculation accuracy of BMS affecting system operation, require to use cell voltage for judgment, it is set to 1; otherwise, it is set to 0.

**PV Charge TO Off-Grid(V):** In PV only mode, if the battery cell voltage reaches the set value, it will automatically switch to Off-Grid mode.

**Battery Share Enable:** One JBL-HYBT-HV does not take effect. Parallel JBL-HYBT-HV takes effect: a. Battery connecting separately to JBL-HYBT-HV is set to 0 b. Battery connecting as a whole to JBL-HYBT-HV is set to 1.



## Grid

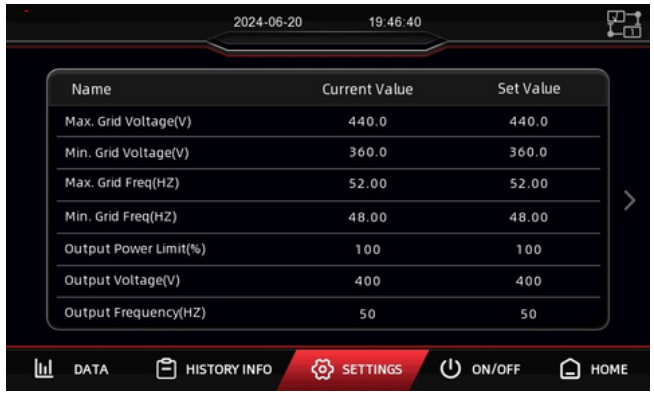


**Max. Grid Voltage(V):** The maximum Grid voltage. Switch to Off-Grid mode when over this value. The default setting is 110%.

**Min. Grid Voltage(v):** The minimum Grid voltage. Switch to Off-Grid mode when under this value. The default setting is 90%.


**Max. Grid Freq(HZ):** The maximum Grid frequency. Switch to Off-Grid mode when over this value. The default setting is +2.

**Min. Grid Freq(HZ):** The minimum Grid frequency. Switch to Off-Grid mode when under this value. The default setting is -2.

**Output Power Limit(%):** AC output power percentage. Set from 1%-120%,the default setting is 100%,and recommend do not over 110%.

**Output Voltage(V):** Set for Off-Grid output voltage 380V or 400V. It may change based on site, restart JBL-HYBT-HV to change setting.

**Output Frequency(HZ):** Set for AC output frequency 50 or 60. It may change based on site, restart JBL-HYBT-HV to change setting.

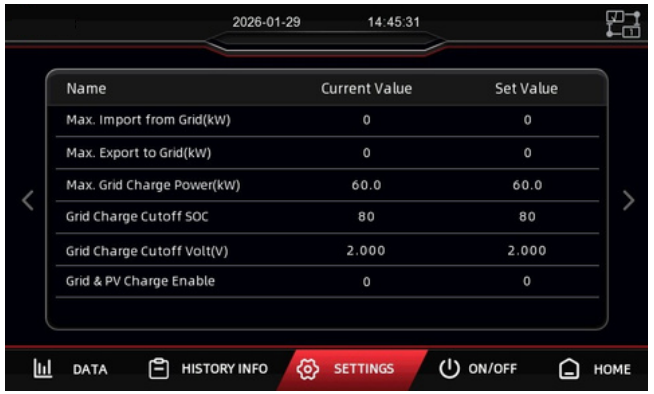

**Max. Import from Grid(KW):** Maximum import power from Grid value.

**Max. Export to Grid(KW):** Maximum export power to Grid value, include PV. Available to set limit value.


**Max. Grid charge power (kW):** Maximum charging power from Grid, available to set limit value.

**Grid Charge Cutoff SOC:** BMS communication enable 1 and BMS voltage judgment enable 0 are activated. When Grid power is sufficient and Grid charging is allowed, charging can be up to the Grid charging cut-off SOC and Grid charging cut-off voltage during Battery first mode, Economic mode - Off peak, and Time schedule - Off peak. When Grid charging cut-off SOC or Grid charging cut-off voltage is reached, only the PV or CP charging is available, Grid does not charge the battery.

**Grid Charge Cutoff Volt(V):** Without BMS, BMS communication enable 1 and BMS voltage judgment enable 0 are activated. When Grid power is sufficient and Grid charging is allowed, charging can be up to the minimum of BMS cell voltage or battery cell voltage during Battery first mode, Economic mode - Off peak, and Time schedule - Off peak. When Grid charging cut-off SOC or Grid charging cut-off voltage is reached, only the PV or CP charging is available, Grid does not charge the battery.

**Grid & PV charge Enable:** When set 1, Grid or GEN available to charge battery with PV simultaneously. PV will charge battery priority, and shortage will supply by Grid or GEN.

When set 0, Grid or GEN are not available to charge battery with PV simultaneously. PV will charge battery priority, Grid or GEN can charge battery when there is none of PV.

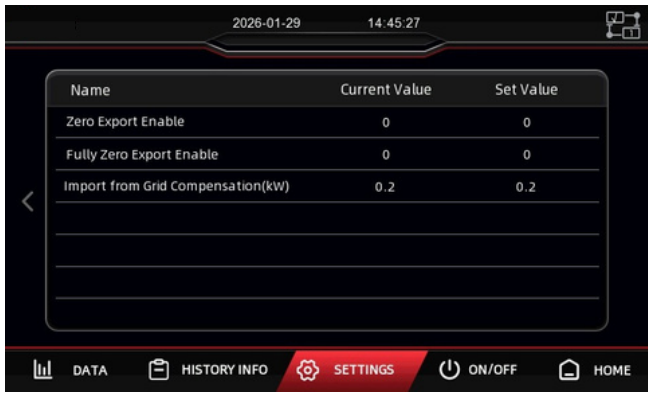



**Zero Export Enable:** Set 1 for JBL-HYBT-HV not allow export power to Grid. Set 0 for JBL-HYBT-HV allow export power to Grid.

**Fully Zero Export Enable:** Set 1, during load first mode, phase unbalance, load power will be the minimum phase power * 3. JBL-HYBT-HVwill output this minimum power, and excess power will import from Grid.

**Import from Grid Compensation(kW):** Force to import power from grid, and maximum is 10kw.



## ATS

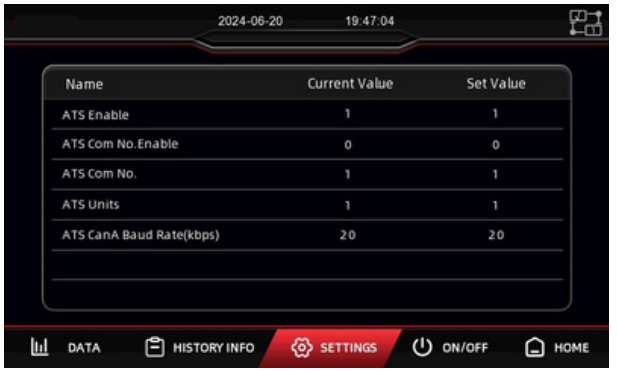


**ATS Enable:** When ATS from Jebel ESS, set to 1. When ATS not from Jebel ESS, set to 2.Distinguish between Grid and DG by dry contact signal.


**ATS Com No.Enable:** when you need to set the communication station number, first set the enable to 1, and then modify the station number. After modification, you must set enable to 0.Only corresponding Inverter and ATS should be turn on .The power should be turn off after setting is completed, so as to avoid repetition.

**ATS Com No.:** Do not set this for single unit. There are two scenarios for JBL-HYBT-HV parallel: 1,Each JBL-HYBT-HV works with one ATS,the same 485 address. 2, All JBL-HYBT-HV use one ATS, do not set.

**ATS Units:** Number of ATS.

**ATS CanA Baud Rate(kbps):** When JBL-HYBT-HV works with ATS, the CanA Baud Rate of ATS as same as the CanB of JBL-HYBT-HV. Set ATS comm.station to 1. The default setting is 20kbps.

## GEN

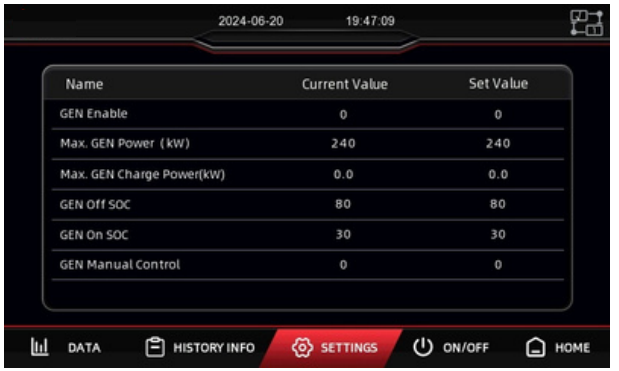


**GEN Enable:** When GEN connects to the Grid input of JBL-HYBT-HV, set Gen enable to 1,otherwise set to 0. Set 1 when works with ATS too.

**Max GEN Power(KW):** The maximum import power from Gen (Load+Charge).

Note: Gen power cannot less than the full load power.(Peak load)


**Max GEN Charge Power(KW):** The maximum charging power from GEN.

**GEN Off SOC:** DG mode and BMS enable is 1, when recent SOC is larger than GEN switch-off SOC, JBL-HYBT-HV sends dry contact signal to switch-off Gen.

**GEN On SOC:** It only takes effect when DG is enable and battery has BMS. In the off grid mode, when current soc is less than gen on soc, JBL-HYBT-HV sends dry contact signal to switch-on the generator.

**GEN Manual Control:** Gen manual switch. Set 1 for JBL-HYBT-HV sends dry contact signal to switch-on Gen, and set 0 for switch-off.

## Parallel

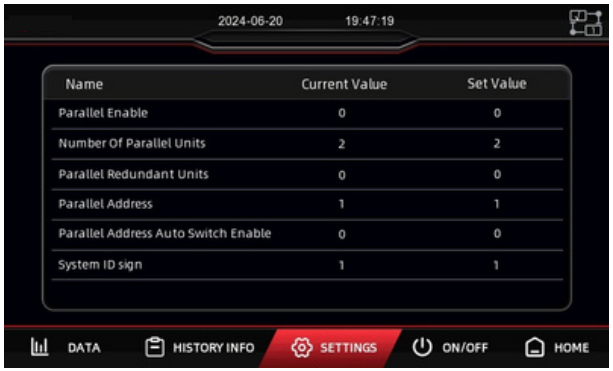


**Parallel Enable:** Set 1 for activity parallel function, all device needs set to 1.

**Number Of Parallel Units:** Number of parallel units, 2 units set 2, 3 units set 3.

**Parallel Redundant Units:** The maximum number of faults that can occur in a parallel system can only be set to 0 or 1. When set to 0, when any units in the parallel system fails, all units will switch to failure; Set to 1, when the number of faults is not greater than 1, other units will still operate normally (maximum supported number of faults is 1).


**Parallel Address:** Address for parallel system, do not repeat. Address must set from 1,and continuous digits, number 1 for master.

**Parallel Address Auto Switch:** Set 1 to prevent conflicting parallel addresses from being set within the system after enabling it.

**System ID sign:** Monitoring distinguishes platform whether the devices are the same system and uses it to collect data. Setting the same non-zero number for devices in the same system here.




## Mode

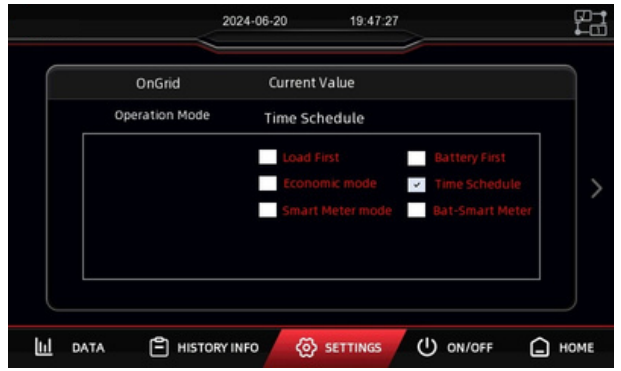


**Operation Mode:** Working mode (Load first; Battery first; Ecomonic mode; Time schedule; Smart meter mode; Bat-smart meter mode).

## Other

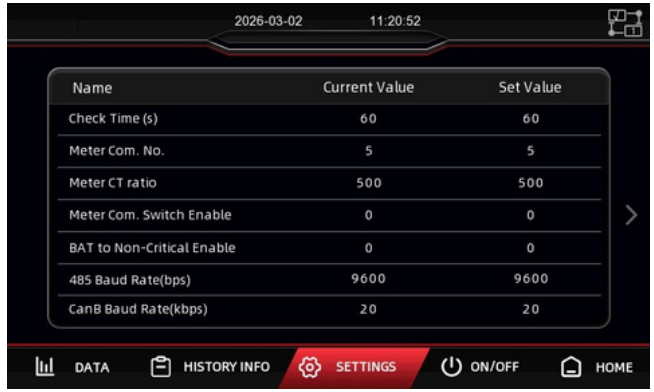


**Check Time(S):** Power-on self testing time

**Meter Com No.:** Communication address of meter


**Meter CT ratio:** Meter CT ratio

**Meter Com. Switch Enable:** Modify 0 for 3rd controller or JBLOG communication with smart meter via RS485. Modify 1 for JBL-HYBT communication with smart meter via Rs485. Modify 2 for JBL-HYBT communication with smart meter via Rs232 to Rs485. Modify 3 for 3rd controller or JBLOG communication with smart meter via RS232 to Rs485.

**BAT to Non-Critical Enable:** Set 1 for battery supply non-critical load.


**485 Baud Rate(bps):** 485 baud rate of JBL-HYBT-HV, default setting is 9600

**CanB Baud Rate(kbps):** CanB baud rate of JBL-HYBT-HV, default setting is 20

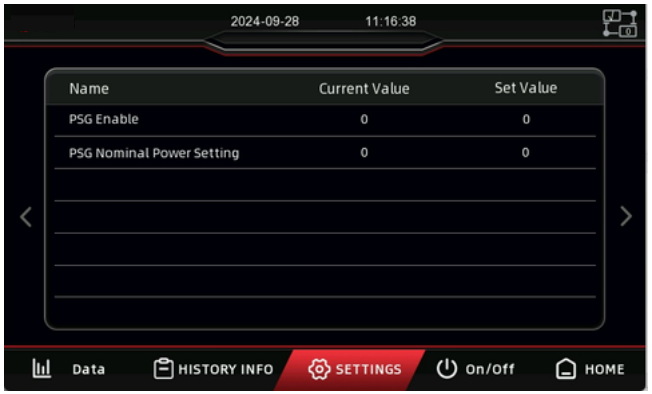


**PSG Enable:** With PV Inverter connected with the load,PSG Enable can be set to 1. Without PV Inverter connected with the load,PSG Enable can be set to 0. 232 convert 485 communication is set to 1, 3rd party controller read the register address 229: (PSG Limit Power) from modbus protocol. 485 communication is set to 2, 3rd party controller read the register address 229: (PSG Limit Power) from modbus protocol. CANB communication is set to 3, JBL-HYBT-HV send the percentage of PSG rated power to 3rd party controller.

**PSG Nominal Power Setting:** The rated power of PV Inverter.

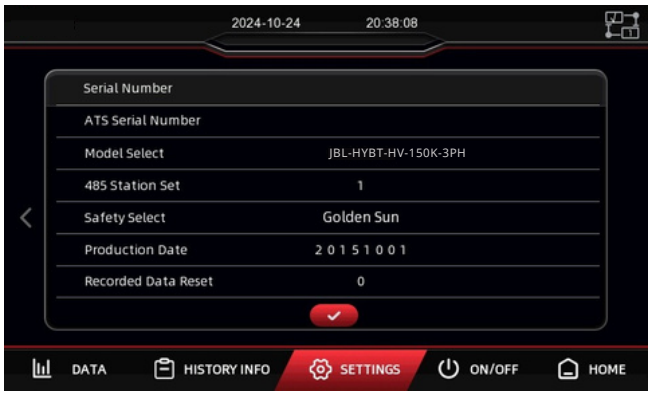


**ATS Serial Number:** ATS equipment serial number, on the nameplate of the ATS.

**Model Select:** select the model of JBL-HYBT-HVaccording to the actual model, and do not modify it. Due to the slight difference in the design of different models, the wrong model will lead to the failure to start and clear the parameter settings, resulting in unnecessary losses. If it needs to be modified for special reasons, please modify it under the guidance of Jebel ESS after-sales team. After modifying the model, restart it to take effect.

**485 Station Set:** RS485 communication address setting. If it is a parallel system, must set it from 1.


**Safety Select:** safety Settings, default parameters, can not be modified.

**Production Date:** Set the factory production date.

**Recorded Data Reset:** The accumulated energy of Data is cleared to zero.



## Protect Parameters

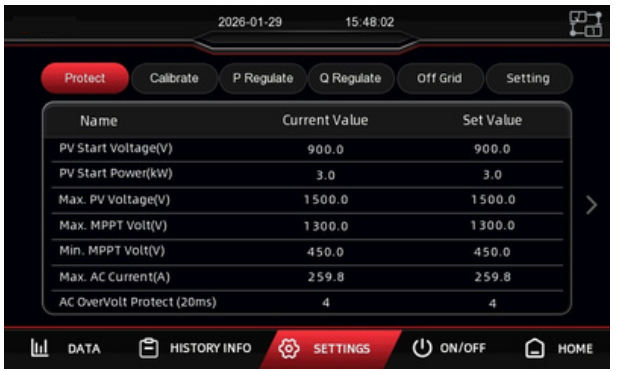


**PV Start Voltage(V):** MPPT tracks the PV starting voltage. Default setting is 900V.

**PV Start Power(KW):** MPPT tracks the maximum power if PV power is larger than PV starting power.

**Max. PV Voltage(V):** PV maximum voltage. JBL-HYBT-HVwill report PV overVoltage fault and shutdown for protection if PV voltage is higher than PV maximum voltage.

**Max. MPPT Voltage(V):** PV maximum voltage for MPPT tracks the PV power.

**Min. MPPT voltage(V):** PV minimum voltage for MPPT tracks the PV power.

**Max. AC Current(A):** Maximum AC current. JBL-HYBT-HVwill report Grid overCurrent fault and shutdown for protection when grid current more than 1.1 times.

**AC OverVolt Protect (20ms):** In Off-Grid mode, JBL-HYBT-HV triggers delay protection of AC overVoltage. Please do not modify it, to avoid affecting system operation normally.




**Current Limiting Period:** Token bucket algorithm.

**Island Protect Level:** The protection function of preventing the JBL-HYBTswitch to Off-grid mode incorrectly when grid unusual. Input range from 0-9, 0 indicates off, 1-9 indicates levels, it is recommended not set it too high.


**Manual Regulate Enable:** Default setting is 1. Please modify it under the guidance of Jebel ESS after-sales service team.

**Reactive Regulate Enable:** Set 1 for switch-on Reactive Power, Set 0 for switch-off.

Jebel ESS **Battery Enable:** Default setting is 0. Please modify to 1 when use with Jebel ESS battery.

**DC Main Contactor Detection Enable:** Default setting is 1. Do not modify personally.

**Boot/APP bum select:** Set 1 for burn from BOOT. Set 0 for burn from App, The default setting is 0.

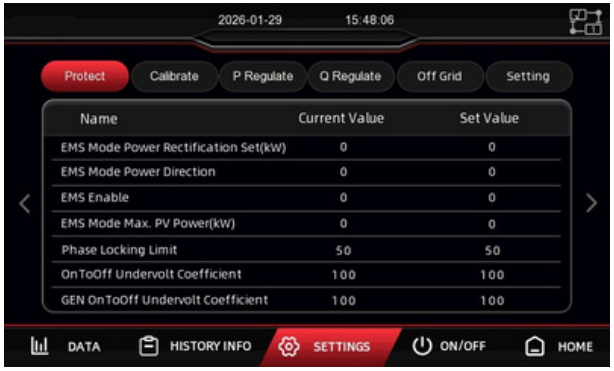


**EMS Mode Power Rectification Set(kW):** During EMS mode, the power of AC-DC or DC-AC.

**EMS Mode Power Direction:** During EMS mode, 0 is the direction of DC-AC, and 1 is the direction of AC-DC.


**EMS Enable:** Set 1 for run EMS mode, set 0 for quit EMS mode.

**EMS Mode Max. PV Power(kW):** During EMS mode, set for the maximum PV power.

**Phase Locking Limit:** During Off-Grid switching to On-Grid, the reaction speed of phase locking.

**OnToOff Undervolt Coefficient:** The coefficient of switching from grid mode to off grid mode is uses to adjust the condition( on to off grid).The default value is 100.

**GEN OnToOff Undervolt Coefficient:** The coefficient of switching from DG mode to off grid mode is uses to adjust the condition (DG on to off grid).The default value is 100.

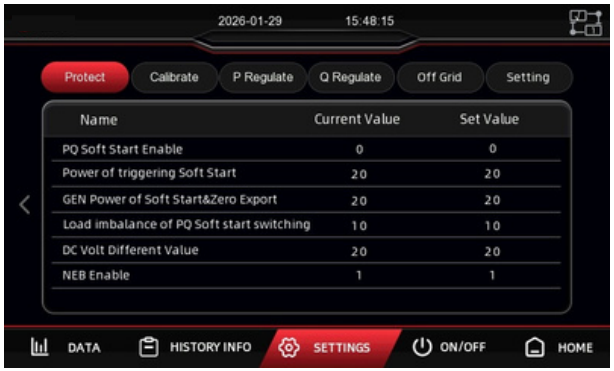


**PQ Soft Start Enable:** Set to 0: No soft start; 1: Genset soft start; 2: Grid-tied soft start.

**Power of triggering Soft start:** Soft start is activated only when the load power exceeds this value.

**GEN Power of soft Start&Zero Export:** The genset anti-backfeed output power for soft start. Used for the genset load rate at the moment of grid-tied connection or before grid disconnection.


**Load imbalance of Po soft start switching:** The load imbalance threshold for switching PO soft start logic. When the load imbalance exceeds this value, soft start enters an alternative control logic.

**DC VOLT different value:** A fault is triggered if the voltage difference between the battery voltage and the DC bus voltage exceeds a preset threshold upon completion of the DC soft-start process.


**NEB enable:** When NEB Enable is set to 1:The SCR disconnects, the Grid_N relay turns OFF, and the NEB relay turns ON. Subsequently, the SCR closes, the Grid_N relay turns ON, and the NEB relay turns OFF. When NEB Enable is set to 0:The Grid_N relay remains normally closed, and the NEB relay remains normally open.





## Calibration Parameters

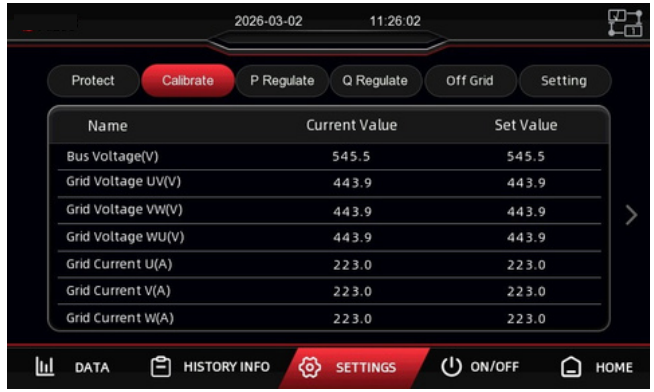


The settings are very important in this page, only modify it under the guidance of Jebel ESS after-sales service team.

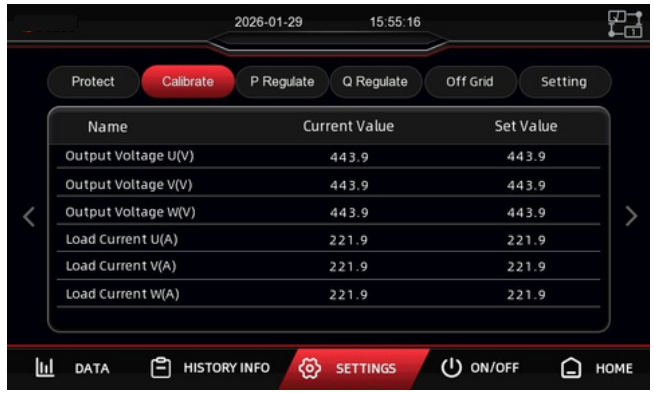


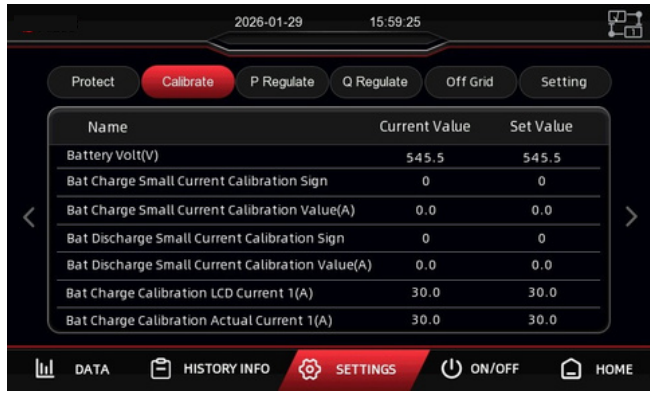

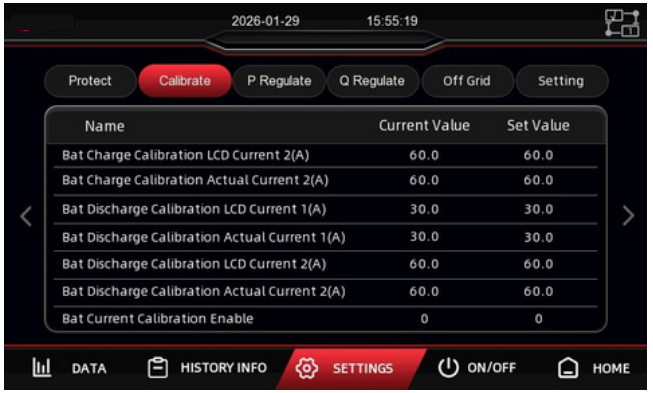

Battery Current calibration parameters. Important setting, only modify it under the guidance of Jebel ESS after-sales service team.

**Battery Current Calibration Enable**: Keep enable to 0 when calibrating battery current. Set enable to 1 after changing it.



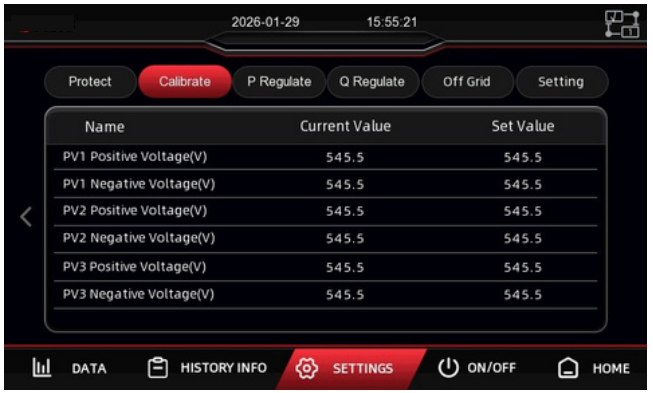


## Reactive Power

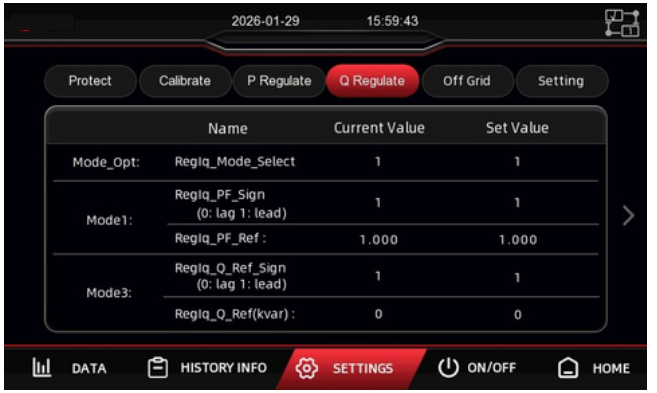


**Mode_Opt: Reglq_Mode_Select**: Reactive power mode from 0 - 4.

**Mode1: Reglq PF Sign(0:lagging 1:leading)**: Reactive power direction, 0 is lagging, 1 is leading.

**Mode1:Reglq PF Ref**: Reactive power compensation.


**Mode3:Reglq Q Sign(0:lagging 1:leading)**: Reactive power direction, 0 is lagging, 1 is leading.

**Mode3:Reglq Q Ref(kVar)**: Reference value of reactive power from Grid.

## Grid Management





Important setting, only modify it under the guidance of Jebel ESS after-sales service team.

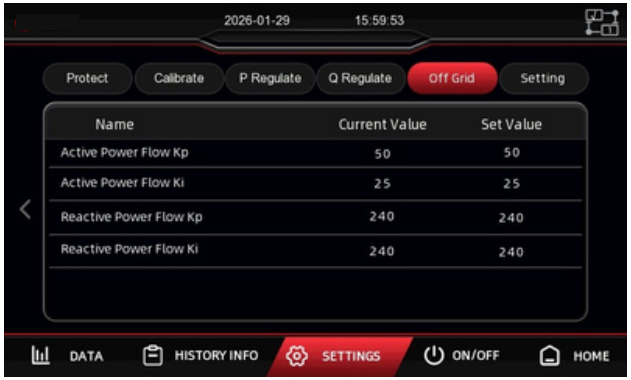



Off-Grid current sharing value. Important setting, only modify it under the guidance of Jebel ESSafter-sales service team.

## Protection Setting

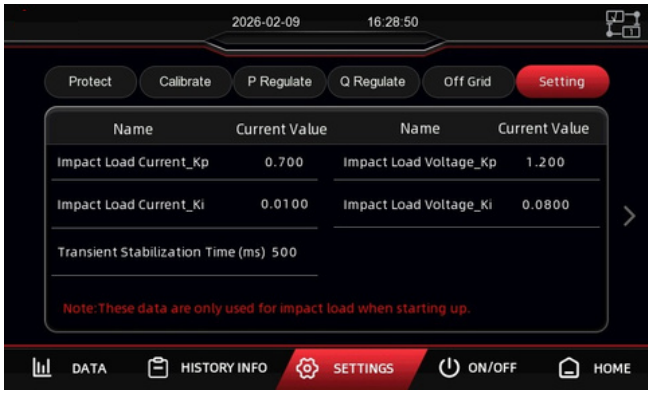



Important setting, only modify it under the guidance of Jebel ESS after-sales service team.

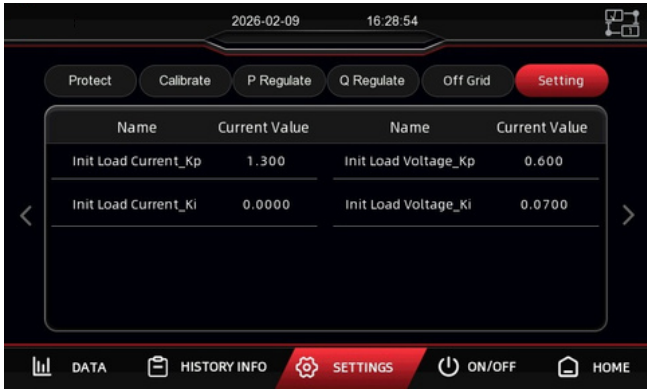







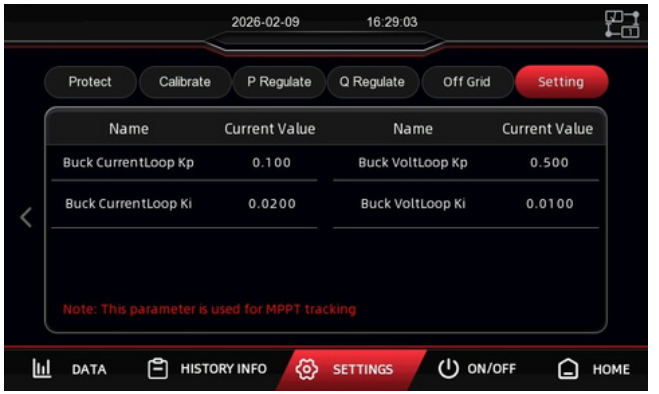


The page without instructions is the factory preset parameter, please do not modif.

If the subsequent scheme changes, please modify the parameters under the guidance of Jebel ESS.

## 7.3 LCD display information schedule

General history failure table

| NO. | Information | |
|---|---|---|
| | English | Chinese |
| 1 | DC_Inverse_Failure | PV接反永久故障 |
| 2 | IGBT_Failure | IGBT永久故障 |
| 3 | EEPROM_Write_Failure | EEPROM写永久故障 |
| 4 | EEPROM_Read_Failure | EEPROM读永久故障 |
| 5 | AC_MainContactor_Failure | 主接触器永久故障 |
| 6 | AC_SlaveContactor_Failure | 辅接触器永久故障 |
| 7 | GFDI_Failure | GFDI永久故障 |
| 8 | GFCI_Failure | GFCI永久故障 |
| 9 | RISO_Failure | 绝缘阻抗永久故障 |
| 10 | PV Voltage High Fault | PV电压高故障 |
| 11 | CanB_Communication_Fault | CanB通信故障 |
| 12 | Pv1 Current High Fault | Pv1电流高故障 |
| 13 | BMS_Communication_Fault | BMS通讯故障 |
| 14 | PV RISO Fault | PV对地绝缘阻抗故障 |
| 15 | BMS_Fault | BMS故障 |
| 16 | DC_OverCurrent_Fault | 直流过流故障(Trip) |
| 17 | Fire_Fault | 消防故障 |
| 18 | Pv1 Over Current Fault(INT) | PV1过流故障(INT) |
| 19 | IGBT_Conv_Fault(Trip) | 变流器IGBT故障(Trip) |
| 20 | IGBT_Buck_Fault(Trip) | Buck IGBT故障(Trip) |
| 21 | Converter L Over Current Fault | 变流器电感过流故障(Trip) |
| 22 | Buck L Over Current Fault(Trip) | Buck电感过流故障(Trip) |
| 23 | AC_NoUtility_Fault | 交流无市电故障 |
| 24 | AC_GridPhaseSeque_Fault | 交流电网相序反故障 |
| 25 | AC_PLL_Fault | 交流锁相故障 |
| 26 | AC_Volt_Unbalance_Fault | 交流电压不平衡故障 |
| 27 | AC_Curr_Unbalance_Fault | 交流电流不平衡故障 |
| 28 | AC_WU_OverVolt_Fault | 交流WU过压故障 |
| 29 | AC_WU_UnderVolt_Fault | 交流WU欠压故障 |



| NO. | Information | |
|---|---|---|
| | English | Chinese |
| 30 | AC_VW_OverVolt_Fault | 交流VW过压故障 |
| 31 | AC_VW_UnderVolt_Fault | 交流VW欠压故障 |
| 32 | AC_UV_OverVolt_Fault | 交流UV过压故障 |
| 33 | AC_UV_UnderVolt_Fault | 交流UV欠压故障 |
| 34 | AC_OverFreq_Fault | 交流过频故障 |
| 35 | AC_UnderFreq_Fault | 交流欠频故障 |
| 36 | AC_GridCurr_DcHigh_Fault | 电网直流量高故障 |
| 37 | Converter_LCurr_DcHigh_Fault | 变流器电感直流量高故障 |
| 38 | Buck_LCurr_DcHigh_Fault | Buck电感直流量高故障 |
| 39 | AC_GridCurr_High_Fault | 电网电流高故障 |
| 40 | Buck_Module_OverTemp_Fault | Buck模块过温故障 |
| 41 | Max T & L OverTemp Fault | 变压器和电感过温故障 |
| 42 | SCR_OverTemp_Fault | SCR过温故障 |
| 43 | Transformer_OverTemp_Fault | 变压器过温故障 |
| 44 | LowTemp_Fault | 低温故障 |
| 45 | EPO_Stop | 紧急停机 |
| 46 | KeyEmergencyStop | 手动关机 |
| 47 | LcdEmergencyStop | LCD关机 |
| 48 | DC_MainContactor_Fault | 直流主接触器故障 |
| 49 | PV_Thunder_Fault | PV直流防雷器故障 |
| 50 | AC_Thunder_Fault | 交流防雷器故障 |
| 51 | DC_SoftStart_Fault | DC软启故障 |
| 52 | INT_ConverterL_OverCurr_Fault | 变流器电感过流故障（INT) |
| 53 | INT_BuckL_OverCurr_Fault | Buck电感过流故障（INT） |
| 54 | Batt_OverVolt_Fault | 电池过压故障 |
| 55 | Batt_UnderVolt_Fault | 电池欠压故障 |
| 56 | Batt_OverCurr_Fault | 电池过流故障 |
| 57 | Batt_OverCharge_Fault | 电池过充故障 |
| 58 | Fault_Feedback_Warning | 故障反馈告警 |
| 59 | Batt_UnderVolt_Warning(V) | 电池欠压告警(V) |
| 60 | AC_WU_OverVolt_Rmt_Warning | 电网WU过压告警 |
| 61 | AC_WU_UnderVolt_Rmt_Warning | 电网WU欠压告警 |
| 62 | AC_VW_OverVolt_Rmt_Warning | 电网VW过压告警 |
| 63 | AC_VW_UnderVolt_Rmt_Warning | 电网VW欠压告警 |
| 64 | AC_UV_OverVolt_Rmt_Warning | 电网UV过压告警 |
| 65 | AC_UV_UnderVolt_Rmt_Warning | 电网UV欠压告警 |

## 7.4 General troubleshooting

If there is a fault during the operation, please click the LCD "history information" page to view the fault information. The following are the common fault analysis and handling steps of JBL-HYBT-HV:

1. Key emergency stop: turn JBL-HYBT-HV panel knob to "off" andling steps: the knob is shut down normally, no need to handle.

2. LCD emergency stop: click "off" on JBL-HYBT-HV screen rocessing steps: the screen is shut down normally, no need to handle.

3. Emergency stop: emergency stop button pressed. andling steps: release the emergency stop button in case of no other abnormalities.

4. Batt_UnderVolt_Fault:

Possible reasons:

a. The battery voltage sampled on the screen reaches the under-voltage protection condition and triggers it.

b. The switch of battery on battery side or the on the energy storage controller is not turned on.

c. If this fault occurs during operation, the battery voltage may be pulled down due to high-power output, or the battery itself may be defective.

d. If it is a battery with BMS, this fault will also occur if the lowest cell voltage of the battery unit transmitted by the BMS to the energy storage controller reaches the protection condition.

Processing steps:

a. First, check the battery connection, screen sampling error, and battery parameter settings.

b. If it is a battery with BMS, check whether the BMS data meets the protection conditions.

c. If there is no problem with the above, please contact Jebel ESS for assistance.

5. Batt_OverVolt_Fault:

Possible reasons:

a. The battery voltage sampled on the screen reaches the overvoltage protection trigger condition.

b. If it is a battery with BMS, this fault will also occur if the highest cell voltage of the battery unit transmitted by the BMS to the energy storage controller reaches the trigger protection condition.

Processing steps:

a. Check whether the number of battery cells and the overvoltage protection value are set correctly. If not, please set the parameters correctly.

If the parameters are correct due to the overvoltage of the battery itself, please contact Jebel ESS for assistance.

6. Batt_OverCharge_Fault: the battery charging current is higher than the maximum charging current.

Processing steps:

Check whether the battery charging current setting value and the maximum charging current value are reasonable. The maximum charging current value of the battery shall be set according to the recommendations given by the battery manufacturer. The setting value of the battery charging current hall be less than the maximum charging current protection value.



7. Batt_OverCurr_Fault: the battery discharge current is higher than the maximum discharge current

Processing steps:

Ceck whether the maximum discharge current value of the battery is reasonable, multiply the maximum discharge current by the battery voltage, calculate the maximum discharge power of the battery, see whether it is less than the load power, if es, reduce the load power.

8. BMS_Fault: secondary or tertiary battery failure

Processing steps:

A. check the specific faults reported by BMS

B. contact the battery manufacturer to solve the problem

C. restart after troubleshooting

9. BMS_Communication_Fault: the energy storage inverter did not receive CAN data sent by battery BMS

Processing steps:

A. check whether the CAN line of BMS is connected to the CAN-A port of the inverter's control board.

B. check if the L and H CAN line are connected reversely.

C. check whether the CAN line is interfered. Suggest to use sampling shielded communication line.

D. use the CAN box to check whether there is data sent by the BMS on the bus.

E. if the communication still fails, contact Jebel ESS.

10. Bypass_Communication_Fault: the energy storage inverter did not receive can data sent by bypass cabinet

Processing steps:

A. check whether the CAN line of ATS is connected to the CAN-B port of the inverter's control board.

B. check whether the L and H CAN line is connected reversely

C. check whether the CAN line is interfered. Suggest to use sampling shielded communication line.

D. use CAN box to check if there is data sent by ATS on the bus.

E. if communication still fails, contact Jebel ESS.

11. AC_NoUtility_Fault: no AC voltage.

Processing steps: generally, this fault will not fade out because there is no output due to other reasons.

12. AC_OverFreq_Fault: the power grid frequency exceeds the upper limit, and the energy storage inverter enters off grid state.

Processing steps: check whether the upper limit of power grid frequency is reasonable. If yes, wait until it returns to normal, the inverter will automatically enter into grid connection state.

13. AC_UnderFreq_Fault: the power grid frequency is lower than the lower limit, and he energy storage inverter enters the off grid state.

Processing steps: check whether the lower limit of power grid frequency is reasonable. If yes, wait until the power grid frequency returns to normal, JBL-HYBT-HV will automatically enter into grid connection state.

14. AC_UV_OverVolt_Rmt_Warning: when the utility grid voltage is higher than the upper limit, he energy storage inverter enters off grid state.

Processing steps: check whether the upper limit setting of power grid voltage is reasonable. If yes, wait until the power grid voltage returns to normal, and JBL-HYBT-HV will automatically enter into grid connection state.

15. AC_VW_OverVolt_Rmt_Warning: when the grid voltage is higher than the upper limit, JBL-HYBT HV enters off grid state.

Processing steps: check whether the upper limit setting of power grid voltage is reasonable. If yes, wait until the power grid voltage returns to normal, and JBL-HYBT-HV will automatically enter into grid connection state.

16. AC_WU_OverVolt_Rmt_Warnin: when the grid voltage is higher than the upper limit, JBL-HYBT-HV enters off grid state.

Processing steps: check whether the upper limit setting of power grid voltage is reasonable. If yes, wait until the power grid voltage returns to normal, and JBL-HYBT-HV will automatically enter into grid connection state.

17. AC_UV_UnderVolt_Rmt_Warning: when the grid voltage is lower than the lower limit, JBL-HYBT-HV enters off grid state.

Processing steps: check whether the lower limit setting of power grid voltage is reasonable. If yes, wait for the power grid voltage to return to normal, and JBL-HYBT-HV will automatically enter into grid connection state.

18. AC_VW_UnderVolt_Rmt_Warning: when the grid voltage is lower than the upper limit voltage, JBL-HYBT-HV enters off grid mode.

Processing steps: check whether the lower limit setting of power grid voltage is reasonable. If yes, wait for the power grid voltage to return to normal, and JBL-HYBT-HV will automatically enter into grid connection state.

19. AC_WU_UnderVolt_Rmt_Warning: when the grid voltage is lower than the upper limit voltage, JBL-HYBT-HV enters off grid state.

Processing steps: check whether the lower limit setting of power grid voltage is reasonable. If yes, wait for the power grid voltage to return to normal, and JBL-HYBT-HV will automatically enter into grid connection state.

20. AC_GridPhaseSeque_Fault: reverse phase sequence connection of power grid

Processing steps: check the three lines of phase sequence U V W of the utility grid, which are corresponding to A B C connected to the AC input terminal of inverter.

21. OverTemp_Fault: the temperature inside of the machine is too high.

Processing steps:

A. check whether the power supply micro break of the inverter is turned on. If not, turn it on.

B. check whether JBL-HYBT-HV air inlet and outlet are blocked, and clean dust regularly.

C. wait for the machine to cool down, the fault is eliminated and inverter restart normally, and observe whether the fan works when the temperature reaches 60 ℃. If not, please contact Jebel ESS.

Regarding other faults, please contact relevant professionals of Jebel ESS.



## 7.5 Working modes

Please refer to Section 7.2.4 for details on operation mode setup procedure.

**Caution!**

Before the machine leaves the factory, the operation mode will be set according to the technical agreement. Jebel ESS will not be responsible for the consequences caused by modifying the operation mode without the consent of Jebel ESS. Please contact Jebel ESS service team for modification if needed.

### 7.5.1 On-Grid mode

Optional functions in grid connection mode:

**Zero export function enable**

1.When Zero export function enable is set to 1, the excess power cannot export to grid

2.When Zero export function enable is set to 0, the excess power can export to grid.

**Grid&PV charge together enable**

1.When simultaneous charging function enable is set to 1, grid and PV can charge battery simultaneously.

2.When simultaneous charging function enable is set to 0, grid and PV can not charge battery simultaneously.

Please refer to Section 7.2.4 for setup procedure.

#### 7.5.1.1 Load First mode (Zero-export function is optional)

1. PV is higher than load consumption, PV will priority supply load, then excess power will charge battery. If there still some power remain, when Non-zero export function is activated, PV can export to grid, the export to grid power can be set.

2. PV is lower than load consumption, PV and battery will supply load simultaneously.

3. When battery discharging until discharge cut-off SOC, PV and grid will supply load simultaneously. When load consumption is higher than PV and "max import from grid", load will force to take power from grid.

**Note:** In order to maintain the discharge cut-off SOC, there is a trickle charge start and end setting limit since BMS and inverter need take power from battery to remain their own running.

#### 7.5.1.2 Battery First mode (Zero-export function is optional)

1. PV is higher than charge power, PV will priority charge battery, then excess power will supply load. If there still some power remain, when Non-zero export function is activated, PV can export to grid, the export to grid power can be set.

2. PV is lower than charge power, PV will priority charge battery, grid will supply load then charge battery. Grid charge power can be set, when grid charging until Grid charge power SOC, grid will stop charging.

3. Import from grid power can be set, when load consumption is higher than "max import from grid" , battery and grid will supply load simultaneously.

#### 7.5.1.3 Economy mode (Zero-export function is optional)

1. During Off-peak:

The working mode is same as battery-first mode.

2. During Mid-peak:

A. Battery doesn't discharge, grid won't charge battery.

B. PV is higher than load consumption; PV will priority supply load, then excess power will charge battery.

C. PV is lower than load consumption; PV and grid will supply load simultaneously. PV won't charge battery.

3. During On-peak:

The working mode is same as load-first mode.

**Note**: It supports the time period settings for off-season and peak-season, as well as the time period settings for working days and non-working days.

#### 7.5.1.4 Smart meter mode (Zero-export function is optional)

1. PV is higher than the sum of critical load, non-critical load and charge power, PV will supply critical load and non-critical load first, then excess power will charge battery:

A. When Zero-export enable is activated, excess PV cannot export to the grid

B. When Zero-export enable is inactivated, excess PV can export to the grid, the export to grid power can be set

2. PV is higher than critical load and non-critical load, but lower than the sum of critical load, non-critical load and charge power, PV will priority supply the critical load and non-critical load, then excess power will charge battery.

3. PV is higher than critical load, but lower than critical load and non-critical load, PV will priority supply critical load, then excess power will supply non-critical load.

A. When BAT to non-critical load enable is activated, PV and battery will supply non-critical load together.

B. When BAT to non-critical load enable is inactivated, PV and grid will supply non-critical load together.

**Note**: The sum of PV power and battery power cannot higher than the rated power of JBL-HYBT-HV.

4. PV is lower than critical load, PV and battery will supply critical load together:

A. When BAT to non-critical load enable is activated, either battery or battery and grid will supply non-critical load.

B. When BAT to non-critical load enable is inactivated, grid will supply non-critical load.

**Note**: The sum of PV power and battery power cannot higher than the rated power of JBL-HYBT-HV.



#### 7.5.1.5 Time schedule mode

1. On-peak (Set export to grid power is X)

A. When PV is higher than X, PV will priority export power to gird through JBL-HYBT-HV, then excess power will charge battery.

B. When PV is lower than X, PV will priority export power to grid through JBL-HYBT-HV, then battery will export the rest.

2. Off-peak (Set Grid charge power is Y)

A. When PV is higher than charge power, PV will priority charge battery, then excess power can export to grid, the export to gird power can be set.

B. When PV is lower than charge power, PV will priority charge battery, the insufficient will supply by grid. The max charge power will be the grid charge power. The grid will charge battery until grid charge cut-off SOC.

3. Mid-peak

Battery doesn't charging or discharging to grid. If PV is connected, it will priority charge battery, then excess power can export to grid, the export to grid power can be set.

#### 7.5.1.6 Bat-Smart meter mode

1. PV is higher than charge power and critical load, PV will priority charge battery, then supply the critical load and non-critical load simultaneously.

A. When Zero-export enable is activated, the excess power cannot export to the grid.

B. When Zero-export enable is inactivated, the excess power can export to the grid, and the export to grid power can be set

2. PV is higher than charge power but lower than charge power and critical load, PV will priority charge battery, then excess power will supply the critical load, and grid will supply the rest of loads.

3. PV is lower than charge power, grid will priority charge battery, and then supply load.

### 7.5.1.7 EMS MODE

**Description:**







1. In EMS mode, JBL-HYBT-HV is fully controlled by EMS for charging and discharging, Jebel ESS's all programmed working modes will invalid;

2. The power transmitted under EMS mode is still limited by the screen setting value;

3. It needs to be used with EMS;

4. the controlled power includes PV power and inverter rectifier power (only PV power can be controlled when it is not connected to the power grid, and the inverter power can be automatically adjusted according to the load conditions). When it is set as inverter, DC is output to AC. when it is set as rectifier, AC charges the battery. See the control instructions below for details.

**Control Description:**
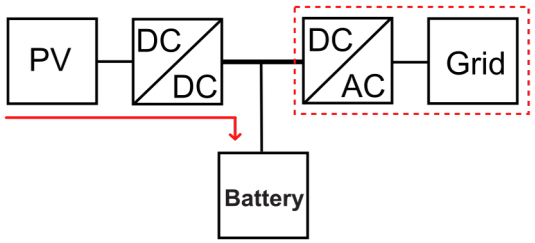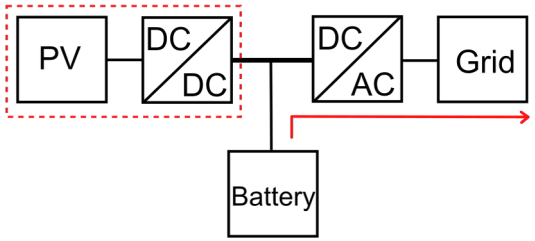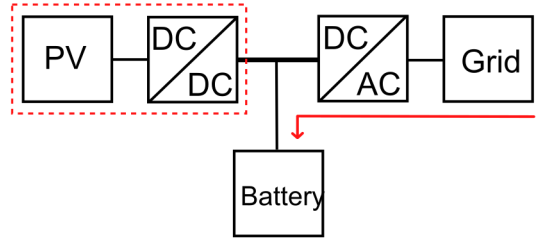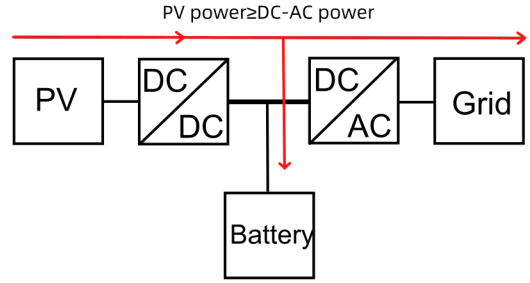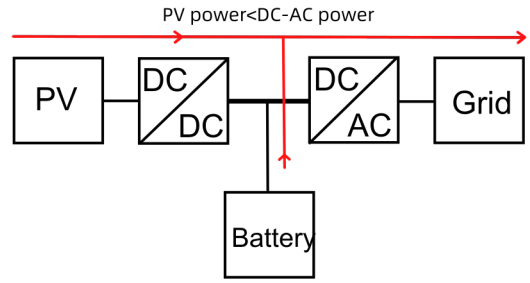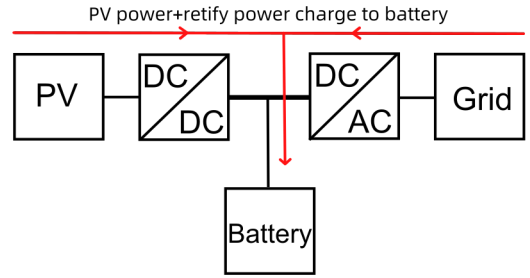
| No. | Diagram | Description |
|---|---|---|
| 1 | All PV power charge to battery, DC-AC rectifier power remains 0   | Keep the DC-ACrectifier power at 0, only modify PV power, at this time, PV is fully charged and AC has no power |
| 2 | PV power remains 0, all the DC-AC power send to AC   | Keep PV power at 0, only modify the DC-AC power, at this time, the battery inverts to AC |
| 3 | PV power remains 0, all retifier power charge to battery   | Keep PV power at 0, and only modify the rectifier power. At this time, the AC charge battery |
| 4 | PV power≥DC-AC power   | PV power higher than or equal to inverter power, PV convert to AC in priority, remaining charge to battery |
| 5 | PV power<DC-AC power   | PV power lower than DC-AC power, PV and battery output to AC together |
| 6 | PV power+retify power charge to battery   | PV and AC power charge battery together, when PV+AC power exceeds the max. charging value, use PV power to charge battery in priority |

### 7.5.2 Off-Grid Mode

1. PV is higher than load consumption, PV will priority supply load, then excess power will charge battery.

2. PV is lower than load consumption, battery will discharge. When battery discharging until GEN ON SOC, then,

A. If GEN is not connected, battery will discharge until "BAT underVlot Warning", JBL-HYBT-HV will stop AC output, switch to only PV charge battery.

B. If GEN is connected, JBL-HYBT-HV will switch-on GEN with dry contact control, then GEN will supply load and charge battery.

### 7.5.3 DG Mode

1. Generator connection (dry contact control)

In Off-grid mode: When battery discharging until GEN ON SOC (If no BMS, it will be GEN ON Voltage), JBL-HYBT-HV will switch-on GEN by dry contact to supply load and charge battery. JBL-HYBT-HV will consistently supply load during switching to GEN mode fully complete.

2. When GEN is fully complete started

A. When PV is higher than charge power, PV will charge battery only.

B. When PV is lower than charge power, PV will priority charge battery. GEN will supply load, then it is an option to let GEN charge battery or not according to customer's requirement.

C. When charging battery until GEN OFF SOC (If no BMS, it will be GEN OFF Voltage), JBL-HYBT-HV will switch-off GEN by dry contact then switch to Off-grid mode. When grid back, JBL-HYBT-HV will run Off-grid mode for a very short period, then switch to On-grid mode.



When temperature too high, output power of JBL-HYBT-HV will decrease, which is normal. However, if this happens frequently, check the cooling surface of the inverter or place it in a place with good ventilation condition. If the fan gets dirty,please clean the dust. If there is any problem inside JBL-HYBT-HV, please contact your local distributor or Jebel ESS service team for help.



# Routine Maintenance 8

## 8.1 Regular maintenance

Due to the influence of environment temperature, humidity, dust and vibration, the devices inside the JBL-HYBT-HV will be aged and worn, which will lead to potential failure inside the JBL-HYBT-HV. Therefore, it is necessary to carry out daily and regular maintenance to ensure its normal operation and service life. All measures and methods to help the JBL-HYBT-HV in good working condition belong to the scope of maintenance work.

### 8.1.1 Safety precautions

(1) Only qualified and authorized personnel can maintain the JBL-HYBT-HV.

.(2) When carrying out maintenance work, do not leave the screws, washers and other metal parts in the JBL-HYBT-HV, otherwise the equipment may be damaged.

(3) If only the circuit breaker is disconnected, the cable connection terminal inside the JBL-HYBT-HV is still electrified.

(4) Before opening the cabinet door and starting the formal maintenance work, it is necessary to not only disconnect the circuit breaker, but also disconnect the front and rear level circuit breakers of the inverter.

(5) After disconnect all the power of JBL-HYBT-HV, please wait at least 5 minutes before maintenance.

(6) Disconnect all external connections and internal power supply of the JBL-HYBT-HV.

(7) Ensure that the JBL-HYBT-HV is not inadvertently recharged.

(8) Use a multimeter to ensure that the JBL-HYBT-HV is completely electrically neutral inside.

(9) Make necessary grounding and short circuit connections.

(10) Use insulating material cloth to cover the parts near the operation part that may be electrified.

### 8.1.2 System maintenance

Tools to be used during maintenance


| | |
|---|---|
|  | Cell phone that can take photos |
|  | Multimeter |
|  | Thermometer |
|  | Pen and paper |
|  | Spanner, screwdriver etc |
|  | Thermal imager |


### 2.1 Maintenance and inspection checklist for running system

When recording inspection and maintenance, inspection shall be carried out one by one following the table sequence, and the faulty items shall be described accordingly.

Please refer to Capture 10.3 Maintenance and inspection checklist for non-shutdown system.

After the inspection record is completed, photos of the operation status in home page and historical information page shall be taken for record, as shown in the following figures:

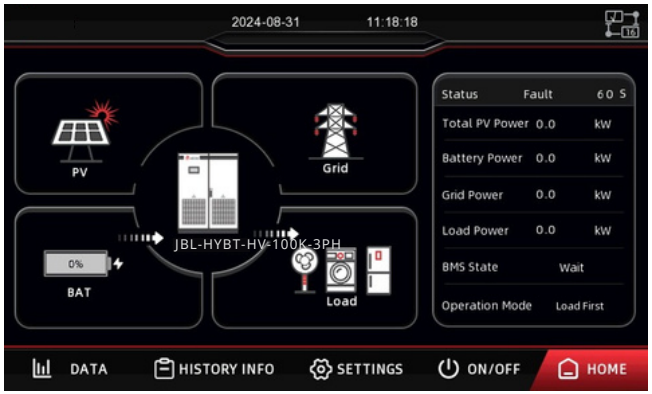

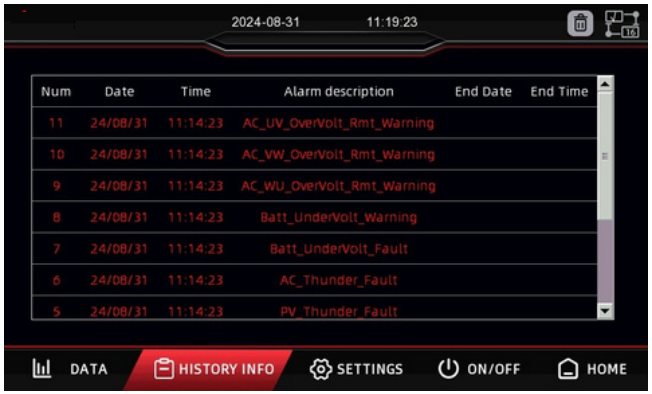
### 2.2 Maintenance and inspection checklist for shutdown system

Please refer to Capture 10.4 Maintenance and inspection checklist for shutdown system.

#### 8.1.3 Relative operations

**CAUTION!**

All maintenance operations must be carried out in the condition that DC side and AC side of the inverter, PV module and AC distribution cabinet switch are all disconnected. Maintenance must be proceeded only after AC and DC disconnected for at least 5 minutes, in order to avoid electric shock!

Only professional technicians familiar with the system operation can perform such operation.



**Disconnect the circuit breaker**

Operate the DC switch of PV input and battery input to disconnect JBL-HYBT-HV from the PV and battery. And operate AC input and AC output switches to disconnect JBL-HYBT-HV from AC sources. Make sure that JBL-HYBT-HV won't switch on accidentally. Test with a multimeter to make sure the device is disconnected and with zero voltage. Even if JBL-HYBT-HV has been disconnected from the grid / main power supply, battery and PV, some of the internal components (such as capacitors) still have residual voltage and discharge slowly, so please wait at least 5 minutes after the circuit breaker is disconnected and use the multimeter to measure and confirm the safety before continuing operation.

**How to use bypass switch**

If the JBL-HYBT-HV fails and cannot continue to operate, it needs to be shut down for maintenance, while the load connected to the JBL-HYBT-HV needs to continue working, the bypass switch can be used to keep the load work uninterruptedly under the power supply of power grid or generator, and the maintenance personnel can carry out maintenance work safely.

Step 1: turn on the bypass switch in case of machine failure.

Step 2: turn off the switches of "AC input", "AC output", "PV input" and "battery input".At this time, the AC and DC power are disconnected from JBL-HYBT-HV, and the load is all supplied by the power grid, after the residual power is discharged, maintenance work can be carried out.

**Note:**

1. After power off, wait for 5 minutes to confirm safety before carrying out maintenance work.

2. Use the multimeter to ensure safety before disassembling and other work.

**Function and safety parameters**

Do not change parameters of JBL-HYBT-HV without the authorization of the local power supply company and the instruction of Jebel ESS.Unauthorized change of functional safety parameters may cause injury to personnel or inverter damage, in this case, Jebel ESS will not provide warranty services.

**Replace the dust screen**

During the use of JBL-HYBT-HV, the dust on the top shall be cleaned regularly, and the dust screen at the air inlet shall be cleaned or replaced. During the cleaning, JBL-HYBT-HV needs to be power-off.

Replacement method of dust screen: the dust filter cotton on the door panel can be directly pulled up for cleaning and replacement.

## 8.2 Waste disposal

The inverter will not cause environmental pollution, since the all the components meet the requirements of environmental protection. According to environmental protection requirements, user shall dispose the inverter in accordance with the relevant laws and regulations.

# 9 Appendix

## 9.1 Specification

| Model | JBL-HYBT-HV-100K-3PH | JBL-HYBT-HV-150K-3PH |
|---|---|---|
| PV parameter | | |
| PV rated power | 110KW | 165KW |
| Max. PV power | 150KW | 225KW |
| Max. PV open circuit voltage | 1500V | 1500V |
| PV MPPT voltage range | 900V-1300V | |
| Max.PV input current | 2*80A | 2*100A |
| Battery parameter | | |
| Battery operating voltage range | 600V-900V | |
| Max battery charge current | 187A | 280A |
| Max battery discharge current | 183A | 275A |
| Max battery charge power | 150KW | 225KW |
| Max battery discharge power | 110KW | 165KW |
| AC output parameter | | |
| Rated voltage | 400Vac | |
| Rated current | 144A | 217A |
| Rated power | 100KW | 150KW |
| Rated frequency | 50/60Hz | |
| Frequency Range | 45-55Hz/55-65Hz | |
| Max. AC output power | 110KVA | 165KVA |
| Max. AC input power | 200KVA | 240KVA |
| Power factor | 0.8lagging-0.8leading | |
| THDI | <3%(Full load) | |
| THDU | ≤2% | |
| Overload capacity | 110%-10 mins,120%-1 min | |
| Other parameter | | |
| Ingress Protection | IP20 | |
| Protective class | Class I | |
| Mains over voltage category | OVC III | |
| PV over voltage category | OVC II | |
| Demand response mode | DRM0-8 (optional) | |
| Inverter toplogy | Isolated | |
| Noise emission | <65dB (A) @1m | |
| Cooling | Intelligent air cooling | |
| Humidity | 0%-95% non-condensing | |
| Maximum altitude | 6000 (derate over 3000m) | |
| Build-in transformer | yes | |
| Operating temperature | -25℃-+55℃ | |
| Active anti-islanding method | Shifting the frequency of the inverter away fromnominal conditions in the absence of a reference frequency (frequency shift) | |
| Communication | | |
| LCD display | Touch screen LCD | |
| Communication interface | RS485/CAN | |



**1.5 times rated PV output:** JBL-HYBT-HV supports 1.5 times rated PV output at most, but the following two conditions(Battery voltage, PV MPPT voltage) need to be met.

| Model | Battery voltage (current actual voltage) | PV MPPT voltage | Inrush current | Max.output overcurrent | Feedback current |
|---|---|---|---|---|---|
| JBL-HYBT-HV-100K-3PH | Above 804V | Exceed the max. battery voltage and above 1125V | 158.7A | 173.2A | 0A |
| JBL-HYBT-HV-150K-3PH | Above 804V | Exceed the max. battery voltage and above 1125V | 238.1A | 259.8A | 0A |

There are diodes on the PV side to prevent PV reflux. In case of short circuit, JBL-HYBT-HV will immediately disconnect all contactors and circuit breakers to prevent other equipment from being affected.

Isolation transformer functions and specifications

1. Buck-boost function: Meet the minimum battery voltage of 600V.
2. Electrical isolation: isolate the primary and secondary to ensure safety.
3. Star-delta transformation: forming the N line.

| Model | JBL-HYBT-HV-100K-3PH | JBL-HYBT-HV-150K-3PH |
|---|---|---|
| Rated capacity | 100KVA | 150KVA |
| Rated frequency | 50/60Hz | |
| Primary rated voltage | 400V | |
| Secondary rated voltage | 400V | |
| Primary rated current | 144A | 217A |
| Secondary rated current | 144A | 217A |
| Connection group | Dyn11 | |
| No-load loss | 485W | 700W |
| Load loss(75℃) | 1700W | 2400W |
| Temperature rise | ≤75K | ≤90K |
| Cooling | AF | |
| Insulation grade | H | |
| Ingress protection | IP00 | |
| Grounding mode | Neutral ungrounding | |
| Dielectric strength | 3000V,60S,≤15mA | 3000V,60S,≤20mA |

## 9.2 Jebel ESS Factory warranty

● **Warranty period**

The warranty period of JBL-HYBT-HV is three year. If otherwise specified in the contract, the contract shall prevail.

During the warranty period, the customer shall show the invoice and date of purchase to the service personnel of Jebel ESS. At the same time, the nameplate mark on the product shall be clear and visible, otherwise, Jebel ESS has the right not to provide warranty service.

● **Warranty conditions**

In the event of failure during the warranty period, Jebel ESS will repair or replace the product free of charge; The customer shall Set aside some time to repair the faulty machine.

● **Liability exemption**

In case of the following circumstances, Jebel ESS has the right not to conduct warranty:

1. Products without logo of Jebel ESS logo.

2. The product or component that has exceeded the valid warranty period of Jebel ESS.

3. Failure or damage (such as high temperature, low temperature, too wet or dry, high altitude, unstable voltage or current, etc.) caused by working in beyond-specified environment or wrong installation, storage or use that violates the instructions.

4. Failure or damage caused by unauthorized installation, repair, modification or disassembly. except for those authorized by Jebel ESS.

5. Failure or damage caused by using components that not supplied by Jebel ESS.

6. Failure, damage or transportation damage caused by accident or human factors (operation error, scratching, carrying, bumping, improper voltage connection etc.).

7. Failure or damage caused by force majeure (such as earthquake, lightning, fire etc.).

8. Failures or damages caused by other factors rather than quality problems of the supplied product itself(including components).



## 9.3 Maintenance and inspection checklist for running system

| No. | Category | Check item | Method/Tool | Standard | Result | Problem description | Check frequency |
|---|---|---|---|---|---|---|---|
| 1 | System operation status check | Whether the LCD display of the machine is in normal operation | Visual inspection screen | Operation status display is not "fault" or "serious fault" | ☐ Normal ☐ Abnormal | | Once a month |
| 2 | | Whether there is error recorded in history that caused shutdown | Visual inspection screen | No error caused shutdown | ☐ Normal ☐ Abnormal | | |
| 3 | | Whether the data transmission of monitoring device is normal | Monitoring web page / APP | Monitoring connection and data transmission are normal | ☐ Normal ☐ Abnormal | | |
| 4 | | Whether the fan rotates normally and the air outlet is normal (first check whether the temperature collected by the equipment reaches the fan opening condition, which normally is 60 ℃) | Visual inspection Thermal imager | Normal rotation, normal air output | ☐ Normal ☐ Abnormal | | |
| 5 | | Whether the equipment has abnormal smell or sound | Smell, listen | No abnormal sound or smell | ☐ Normal ☐ Abnormal | | |
| 6 | | Emergency stop button(when the system is in standby mode) | Manual | The circuit breaker trips after pressing the emergency stop button | ☐ Normal ☐ Abnormal | | |

## 9.4 Maintenance and inspection checklist for shutdown system

| No. | Category | Check item | Method/Tool | Standard | Result | Problem description | Check frequency |
|---|---|---|---|---|---|---|---|
| 1 | System cleaning | Whether there is water leakage or other foreign matters in the room or container | Visual inspection | No water leakage or foreign matter | ☐ Normal ☐ Abnormal | | Once a month |
| 2 | | Whether there are rodents and insects such as rats, geckos, cockroaches and ants in the cabinet | Visual inspection | No animals or insects | ☐ Normal ☐ Abnormal | | |
| 3 | System cable connection (power-off inspection) | Whether the power cable connection is loose | Manual /Wrench | No looseness | ☐ Normal ☐ Abnormal | | Once a month |
| 4 | | Whether the communication cable connection is loose | Manual bolt driver | No looseness | ☐ Normal ☐ Abnormal | | |
| 5 | | Check equipment ground connection | Visual inspection /Multimeter | <=4Ω | ☐ Normal ☐ Abnormal | | |
| 6 | | whether the external connection of the equipment is damaged | Visual inspection | No damage | ☐ Normal ☐ Abnormal | | |
| 7 | Internal cleaning | whether there is moisture or condensation inside the cabinet | Visual inspection | No condensation, no moisture | ☐ Normal ☐ Abnormal | | Once a month |
| 8 | | Whether there is obvious dust inside the cabinet | Visual inspection | No obvious dust | ☐ Normal ☐ Abnormal | | |
| 9 | | Whether the front and rear dust screens has blockage | Visual inspection | No blockage | ☐ Normal ☐ Abnormal | | |
| 10 | | Whether there is obvious damage inside the equipment | Visual inspection | No damage | ☐ Normal ☐ Abnormal | | |
| 11 | | whether there is obvious rust inside the cabinet | Visual inspection | No rust | ☐ Normal ☐ Abnormal | | |
| 12 | | Safety signs | Visual inspection | Safety signs are not shed | ☐ Normal ☐ Abnormal | | |

**Note:** the table only indicates the recommended maintenance frequency of the product. The actual frequency shall be determined according to the specific installation environment. The scale of power station, location and site environment will affect the maintenance frequency. If the operation environment is windy and dusty, it is necessary to shorten the period and increase the frequency.

## 9.5 EMS mode RS485 command(EMS mode is DRM mode)

| | HPS100HV | HPS150HV |
|---|---|---|
| Power on command | 01 06 00 00 00 01 48 0A | |
| Power off command | 01 06 00 00 00 00 89 CA | |
| Turn on EMS mode | 01 06 00 20 00 01 49 C0 | |
| Turn off EMS mode | 01 06 00 20 00 00 88 00 | |
| Rectify AC→DC | 01 06 00 22 00 01 E8 00 | |
| Inverter DC→AC | 01 06 00 22 00 00 29 C0 | |
| 0% rater DC/AC power | 01 06 00 23 00 00 78 00 | |
| 25% rater DC/AC power | 01 06 00 23 00 19 B9 CA | 01 06 00 23 00 26 F9 DA |
| 50% rater DC/AC power | 01 06 00 23 00 32 F9 D5 | 01 06 00 23 00 4B 38 37 |
| 75% rater DC/AC power | 01 06 00 23 00 4B 38 37 | 01 06 00 23 00 71 B8 24 |
| 50% rated PV power | 01 06 00 21 00 32 58 15 | 01 06 00 21 00 4B 99 F7 |
| 100% rated PV power | 01 06 00 21 00 64 D8 2B | 01 06 00 21 00 96 59 AE |

RS485 instruction formula description
AB CD EF GH IJ KL MN OP
AB:485 communication address
CD:Function code
EF GH:Register address
IJ KM:Value
MN OP:CRC check value of the first 6 bits

The appendix only shows part of the power section instructions. Please write the required instructions according to the 485 instruction formula and control the ATESS Modbus RTU protocol.